# Canon

# IXUS 100 IS

# **Camera User Guide**



# **ENGLISH**

- Make sure you read this guide before using the camera.
- Store this guide safely so that you can use it in the future.

# **Checking the Package Contents**

Check if the following items are included in your camera package. If anything is missing, contact the retailer from which you purchased the camera.



Camera



Battery Pack NB-4L (with Terminal Cover)



Battery Charger CB-2LV/CB-2LVE



Interface Cable IFC-400PCU



AV Cable AVC-DC400



Wrist Strap



**Getting Started** 



DIGITAL CAMERA Solution Disk



Canon Warranty System Booklet



DIGITAL CAMERA Manuals Disk Also refer to the manuals on the DIGITAL CAMERA Manuals Disk.

Camera User Guide (This Guide)

Once you have mastered the basics, use the camera's many features to shoot more challenging photos.

Personal Printing Guide

Read when you want to connect the camera to a printer and print.

Software Starter Guide

Read when you want to connect the camera to a computer. Explains how to install and use the software on the DIGITAL CAMERA Solution Disk.



- You can use the included memory card to try out your new camera and take some test shots.
- Adobe Reader is required to view the PDF manuals. Microsoft Word Viewer 2003 can be installed to view Word manuals (Middle East only). If this software is not installed on your computer, access the following web site to download the software:

http://www.adobe.com (in case of PDF)

http://www.microsoft.com/downloads/ (in the case of Word format).

### **Read This First**

#### **Test Shots**

Take some initial test shots and play them back to make sure the images were recorded correctly. Please note that Canon Inc., its subsidiaries and affiliates, and its distributors are not liable for any consequential damages arising from any malfunction of a camera or accessory, including memory cards, that results in the failure of an image to be recorded or to be recorded in a way that is machine readable.

### Warning Against Copyright Infringement

The images recorded with this camera are intended for personal use. Do not record images that infringe upon copyright laws without the prior permission of the copyright holder. Please be advised that in certain cases the copying of images from performances, exhibitions, or commercial properties by means of a camera or other device may contravene copyright or other legal rights even if the image was shot for personal use.

### **Warranty Limitations**

For information on your camera's warranty, please refer to the Canon Warranty System Booklet supplied with your camera. For Canon Customer Support contacts, please see the Canon Warranty System Booklet.

#### **LCD Monitor**

The LCD monitor is produced with extremely high-precision manufacturing techniques. More than 99.99% of the pixels operate to specification, but occasionally non-performing pixels may appear as bright or dark dots. This is not a malfunction and has no effect on the recorded image.

### **Camera Body Temperature**

Please take care when operating the camera for an extended period as the camera body may become warm. This is not a malfunction.

### **Memory Cards**

The various types of memory cards that can be used in this camera are collectively referred to as memory cards in this guide.

# What Do You Want to Do?

Sh	oot					
		-			-	24
S	noot to m	natch s	special cor	naitions		56 – 58
	Take goo	d peo	ple shots			
	25		57	en	15	4 <b>9</b> ×
	Portraits	With r	ightscapes	Kids and pets	At the beach	With snowscapes
	(p. 56)		(p. 56)	(p. 57)	(p. 57)	(p. 58)
(	Take goo	d land	scapes			
					0.0	
			Sunsets		Foliac	e
			(p. 57)		(p. 58	3)
(	Shoot va	rious c	other scen	es		
	-)/-;		1317:1	: 6	9-1	150
	Indo		Fireworks	Underwater		
	(p. !	57)	(p. 57)	(p. 58)	(p. 58)	(p. 58)
F	ocus on f	aces				24, 64, 80
S	hoot in pl	laces	where I ca	nnot use the	flash (turn c	off the flash)59
S	hoot picti	ures w	ith me in t	hem too (self	f-timer)	63, 64
In	sert the	date a	nd time int	o my shots .		62
Ta	ake close	e-up pi	ctures of s	subjects (mad	cro shooting	) <mark>67</mark>
Ta	ake close	e-up pi	ctures of s	subjects using	g the zoom	
(d	ligital ma	cro sh	ooting)			68
Ta	ake sepia	a tone	d or black	and white pic	tures	74
C	hange th	e size	of picture	I want to take	e (recording	pixels) 69
Ta	ake pictu	res co	ntinuously	<b></b> .		71
S	hoot with	out th	e effects o	f camera sha	ıke	
(ir	nage sta	bilizat	ion)			138
S	hoot with	out the	e effects o	f camera sha	ke even in	
I۵	w light of	anditio	ne (High I	SO Auto)		59 72

#### What Do You Want to Do?

<ul> <li>Maintain the focus on moving subjects (Servo AF).</li> <li>Make dark subjects appear brighter (i-Contrast).</li> </ul>		
View		
Look at my pictures		27
Automatically play back pictures (slideshow)		
Look at my pictures on a TV	110, 1	11
Quickly search pictures	102, 1	03
Erase pictures	<mark>28</mark> , 1	12
Protect pictures from accidental erasure	1	16
Shoot/View Movies		
Shoot movies View movies		
• view movies		33
Print	15	
Easily print pictures	1_7	29
2333, p p. 3333		_
Save		
Save images to a computer		34
, and a sign of the sign of th	- Comm	
	_	
Other	〇中	
Turn off sounds		49
Use the camera abroad		33

# **Table of Contents**

Chapters 1-3 explain the basic operations and frequently used functions of this camera. Chapters 4 onward explain the advanced functions, letting you learn more as you read each chapter.

Checking the Package Contents2	MENU Menu – Basic Operations 48
Read This First3	Changing the Sound Settings 49
What Do You Want to Do?4	Changing the Screen Brightness 50
Conventions Used in this Guide8	Returning the Camera to Default
Safety Precautions9	Settings51
•	Low Level Memory Card
1 Getting Started13	Formatting52
	Power Saving Function
Charging the Battery14	(Auto Power Down)53
Inserting the Battery and	Changing the Image Display
Memory Card16	Time53
Setting the Date and Time19	Clock Functions54
Setting the Display Language21	
Formatting Memory Cards22	3 Shooting in Special
Pressing the Shutter Button23	Conditions and Commonly
AUTO Taking Pictures24	Used Functions 55
▶ Viewing Images27	Shooting in Various
Record Erasing Images28	Conditions56
Printing Images29	Turning the Flash Off59
Residue Shooting Movies31	Zooming in More Closely on
▶ Viewing Movies33	Subjects (Digital Zoom)60
Transferring Images to a	Inserting the Date and Time 62
Computer34	₩ Using the Self-Timer63
Accessories38	Using the Face Self-Timer 64
Separately Sold Accessories40	
	4 Selecting Settings
2 Learning More41	Yourself 65
Components Guide42	P Shooting in Program AE66
Information Displayed on	<b>★</b> Turning the Flash On66
the Screen44	Shooting Close-ups (Macro) 67
Indicators46	▲ Shooting Far Away Subjects
FUNC. Menu – Basic	(Infinity)
Operations47	


***	
Zooming In on Close Subjects     (Digital Macro)68	6 Using Various Functions for Shooting Movies 93
Changing the Recording Pixels 69	Changing the Movie Mode94
Changing the Image Quality	Changing the Image Quality99
(Compression Ratio)69	
Adjusting the Brightness	AE Lock/Exposure Shift
(Exposure Compensation) 71	Other Shooting Functions96
Continuous Shooting	Playback Functions
Changing the ISO Speed	% Editing98
Adjusting the White Balance 73	
Changing the Tone of an Image (My Colors) 74	7 Using Playback and Other Functions101
☼ Shooting Using the Two Second	Searching Images
Self-Timer 75	(Index Display)102
Cc Customizing the Self-Timer 76	☆ Viewing Images in
Shooting Using a TV Monitor 76	Filtered Playback103
Changing the Composition with	Viewing Slideshows105
the Focus Lock	Checking the Focus108
Shooting Using the Viewfinder 77	Q Magnifying Images109
5 Getting More Out of	Changing Image Transitions 109
Your Camera 79	Viewing Images on a TV110
Changing the AF Frame Mode 80	Viewing Images on a
Magnifying the Focal Point	High-Definition TV11
AFL Shooting with the AF Lock 82	On Protecting Images116
Shooting with Servo AF	Organizing Images
Changing the Metering Mode	by Category (My Category) 118
AEL Shooting with the AE Lock 83	Rotating Images120
FEL Shooting with the FE Lock 84	Resizing Images12
Shooting with Slow Synchro 84	Trimming
Making Dark Subjects Appear Brighter (i-Contrast)85	€ Adding Effects with
	the My Colors Function123
Red-Eye Correction	C <sub>1</sub> Making Dark Subjects Appear Brighter (i-Contrast)124
Checking for Shut Eyes	© Correcting the Red-Eye
* Shooting Long Exposures 88	Effect129
Changing the Color and Shooting 89	Selecting Images for Printing
Shooting Stitch Assist Images92	(DPOF)126
iiiayes 92	(=: -: /

8 Customizing the Camera	131
Changing Functions	132
Changing Shooting Functions	136
Changing Playback Functions	139
Changing the Start-up	
Image or Sound	139

9 Useful Information	141
Using Household Power	142
Troubleshooting	143
List of Messages that Appear on the Screen	146
Functions Available in Each Shooting Mode	148
Menus	150
Handling Precautions	154
Specifications	155
Index	158

### **Conventions Used in this Guide**

- Icons are used in the text to represent the camera buttons and switches.
- Language that displays on the screen appears inside [] (square brackets).
- The directional buttons and FUNC./SET button are represented by the following icons.



- ?: Troubleshooting tips.
- \( \overline{
  - ①: Things you should be careful about.
- Supplemental information.
- (p. xx): Reference pages. "xx" stands for page number.
- This chapter assumes all functions are at their default settings.

# **Safety Precautions**

- Before using the camera, please ensure that you read the safety precautions described below. Always ensure that the camera is operated correctly.
- The safety precautions noted on the following pages are intended to prevent injuries to yourself and other persons, or damage to the equipment.
- Be sure to also check the guides included with any separately sold accessories you use.

**Warning** Denotes the possibility of serious injury or death.

**Caution** Denotes the possibility of injury.

**Caution** Denotes the possibility of damage to the equipment.

### **A** Warning

#### Camera

Do not look through the camera viewfinder at bright light sources (the sun, etc.).

This could damage eyesight.

- Do not trigger the flash in close proximity to human eyes.
   Exposure to the intense light produced by the flash may damage eyesight. In particular, remain at least one meter (39 inches) away from infants when using the flash
- Store this equipment out of the reach of children and infants.
   Strap: Putting the strap around a child's neck could result in asphyxiation.
   Memory card, day/date battery: Dangerous if accidentally swallowed. If this occurs, contact a doctor immediately.
- Do not attempt to disassemble or alter any part of the equipment that is not expressly described in this guide.
- To avoid the risk of injury, do not touch the interior of the camera if it has been dropped or otherwise damaged.
- Stop operating the camera immediately if it emits smoke, a strange smell, or otherwise behaves abnormally.
- Do not use organic solvents such as alcohol, benzine, or thinner to clean the equipment.
- Do not allow liquids or foreign objects to enter the camera.

This could result in electrical shock or fire.

If liquid or foreign objects come into contact with the camera interior, immediately turn the camera power off and remove the battery.

Use only recommended power sources.
 Using other power sources could result in electrical shock or fire.

### **Battery, Battery Charger**

- Use only recommended batteries.
- Do not place the battery near or in direct flame.
- Do not let the battery come into contact with water (e.g. sea water) or other liquids.
- Do not attempt to disassemble, alter or apply heat to the battery.
- Avoid dropping or subjecting the battery to severe impacts.
  This may cause explosions or leaks, resulting in fire, injury and damage to the surroundings. In the event that a battery leaks and the eyes, mouth, skin or clothing contacts these substances, immediately flush with water and seek medical assistance. If the battery charger becomes wet, unplug it from the outlet and consult your camera
- distributor or the closest Canon Customer Support Help Desk.

  Use only the specified battery charger to charge the battery.
- Do not cut, damage, alter or place heavy items on the power cord.
- Unplug the power cord periodically and wipe away any dust and dirt that has collected on the plug, the exterior of the power outlet, and the surrounding area.
- Do not handle the power cord with wet hands.
   This could result in electrical shock or fire

#### **Other Warnings**

 Do not play the supplied CD-ROM(s) in any CD player that does not support data CD-ROMs.

Playing the CD-ROM(s) in an audio CD player (music player) could damage the speakers. It is also possible to suffer hearing loss from listening with headphones to the loud sounds of a CD-ROM played on a music CD player.

### **▲** Caution

- Be careful not to bang the camera or subject it to strong impacts or shocks when hanging it by the strap.
- Be careful not to bump or push strongly on the lens.
   This could lead to injury or damage the camera.
- Do not use the equipment in a manner that exceeds the rated capacity of the electrical outlet or wiring accessories. Do not use if the power cord or plug are damaged, or not fully plugged into the outlet.

This could result in electrical shock or fire.

- Avoid using, placing or storing the camera in the following places.
  - Places subject to strong sunlight.
  - Places subject to temperatures above 40 °C (104 °F).
  - Humid or dusty areas.

These could cause leakage, overheating or an explosion, resulting in fire, burns or other injuries. High temperatures may also cause deformation of the casing.

- Do not allow dirt or metal objects (such as pins or keys) to contact the charger terminals or plug.
  - This could result in electrical shock, fire or other damage.
- Playing back for a long time may cause feelings of discomfort.

#### Caution

- Do not aim the camera at bright light sources (the sun, etc.).
   Doing so may cause malfunctions or damage the image sensor (CCD).
- When using the camera on a beach or at a windy location, be careful not to allow dust or sand to enter the camera.
- Do not use the flash with dirt, dust or other items stuck to the surface, or if it is covered by your fingers or clothing.

This may cause the camera to malfunction.

- Unplug the battery charger from the power outlet after recharging is complete, or when you are not using it.
- Do not place anything, such as cloth, on top of the battery charger while it is charging.
  - Leaving the unit plugged in for a long period of time may cause it to overheat and distort, resulting in fire.
- Remove and store the battery when you are not using the camera.
   If the battery is left inside the camera, damage caused by leakage may occur.
- Before you discard batteries, cover the terminals with tape or other insulators.
   Contacting other metal materials in waste containers may lead to fire or explosions.
- Keep the battery out of the reach of pets.
   If the battery is bitten, this could cause leakage, overheating or an explosion, resulting in fire, burns or other injuries.
- Do not sit in a chair with the camera in your pocket.
   Doing so may cause malfunctions or damage the LCD monitor.
- When putting the camera in your bag, ensure that hard objects do not come into contact with the LCD monitor.
- Do not attach accessories to the strap.
   If this occurs, it may cause malfunctions or damage the LCD monitor.








# **Getting Started**

This chapter explains preparations before shooting, how to shoot in mode, and then how to view, erase and print the images you take. The latter part of this chapter explains how to shoot and view movies and transfer images to a computer.

### Attaching the Strap/Holding the Camera

- Attach the included strap and place it around your wrist to avoid dropping the camera during use.
- Keep your arms tight against your body while holding the camera firmly by the sides. Be sure that your fingers do not block the flash.

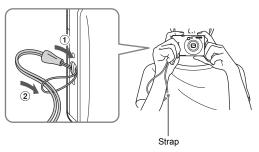

# **Charging the Battery**

Use the included charger to charge the battery.



### Remove the cover.



# Insert the battery.



# Charge the battery.

- For CB-2LV: Flip out the plug ① and plug the charger into a power outlet ②.
- For CB-2LVE: Plug the power cord into the charger, then plug the other end into a power outlet.
- The charge lamp lights red and charging starts.
- The charge lamp will light green when charging has finished. Charging takes approx. 1 hour and 30 minutes.



# Remove the battery.

 Unplug the battery charger from the power outlet, then remove the battery by sliding it in (1) and up (2).





To protect the battery and prolong its life, do not charge it for longer than 24 hours continuously.

### Approximate Number of Shots That Can Be Taken

Number of shots	LCD monitor on.*	210 shots	
Trumbor of onoto	LCD monitor off.	500 shots	
Playback Time (Hours)	5 hours		

- The number of shots that can be taken is based on the Camera & Imaging Products Association (CIPA) measurement standard.
- Under some shooting conditions, fewer shots can be taken.

### **Battery Charge Indicator**

An icon or message will appear on the screen indicating the battery's charge state.

Display	Summary
· 7/4	Good.
	Slightly depleted, but sufficient.
(Blinking red)	Nearly depleted.
"Change the battery pack."	Depleted. Recharge the battery.

# (a)

### Using the battery and charger effectively

Charge the battery on the day, or the day before, it will be used.
 Charged batteries continue to discharge naturally even if they are not used.




Attach the cover to a charged battery so that the **A** mark is visible.

- How to store the battery for long periods.
  - Deplete and remove the battery from the camera. Attach the terminal cover and store the battery. Storing a battery for long periods of time (about a year) without depleting it may shorten its life span or affect its performance.
- The battery charger can also be used when abroad. The charger can be used in regions that have 100 – 240 V (50/60 Hz) AC power. If the plug does not fit the outlet, use a commercially available plug adapter. Do not use devices, such as electrical transformers for foreign travel, because they will cause malfunctions.
- The battery may develop a bulge.
   This is a normal characteristic of the battery and does not indicate a problem.
   However, if the battery bulges to the point where it will no longer fit into the camera, please contact a Canon Customer Support Help Desk.
- If the battery is quickly depleted even after charging, it has reached the end of its life span.
  - Purchase a new battery.

# **Inserting the Battery and Memory Card**

Insert the included battery and a memory card into the camera.






# Check the card's write-protect tab.

If the memory card has a write-protect tab, you will not be able to record images if the tab is in the locked position. Slide the tab up until you hear a click.



# Open the cover.

Slide the cover ①, and open it ②.

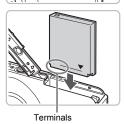

# Insert the battery.

- Insert the battery as shown until it locks into place with a click.
- Be sure to insert the battery in the correct direction or it will not properly lock into place.




4

### Insert the memory card.


- Insert the memory card as shown until it locks into place with a click.
- Be sure the memory card is oriented correctly. Inserting the memory card in the wrong direction could damage the camera.





Close the cover ①, and slide it ② until it locks into place with a click.

# **Removing the Battery and Memory Card**



# Remove the battery.

- Open the cover and press the battery lock in the direction of the arrow.
- The battery will pop up.



### Remove the memory card.

- Push the memory card in until you hear a click, then slowly release it.
- The memory card will pop up.

### **Approximate Number of Shots per Memory Card**

Memory Card	2 GB	8 GB
Number of shots	626	2505

- Values are based on the default settings.
- The number of shots that can be taken will vary depending on camera settings, the subject and the memory card used.



### Can you check the number of shots that can be taken?

You can check the number of shots that can be taken when the camera is in a Shooting Mode (p. 24).



Number of shots that can be taken

#### **Compatible Memory Cards**

- SD memory cards
- SDHC memory cards
- MultiMediaCard
- MMCplus memory cards
- HC MMCplus Card




### What is the write-protect tab?


SD and SDHC memory cards have a write-protect tab. If this tab is in the locked position, [Card locked!] will appear on the screen and you will not be able to take or erase images.

# **Setting the Date and Time**

The Date/Time settings screen will appear the first time the camera is turned on. Since the dates and times recorded into your images are based on these settings, be sure to set them.







- Press the ON/OFF button.
- The Date/Time screen will appear.

### Set the date and time.

- Press the buttons to select an option.
- Press the ▲▼ buttons to set a value.





# Make the setting.

- Press the (st) button.
  - Once the date and time have been set, the Date/Time screen will close.
- Pressing the ON/OFF button will turn off the camera.



### Reappearing Date/Time screen

Set the correct date and time. If you have not set the date and time, the Date/ Time screen will appear each time you turn on the camera.



### Daylight saving time settings

If you select  $\not =$  in Step 2 and press the  $\triangle \triangledown$  buttons and select  $\not =$ , you will set the time to daylight savings (1 hour ahead).

### **Changing the Date and Time**

You can change the current date and time settings.



# Display the menus.

Press the MENU button.



# Select [Date/Time] in the ↑ † tab.

- Press the ◆ buttons to select the †† tab.
- Press the ▲▼ buttons to select [Date/ Time], then press the ( button.



# Change the date and time.

- Follow Steps 2 and 3 on p. 19 to adjust the setting.
- To close the menus, press the MENU button.




# Date/Time battery

- The camera has a built-in date/time battery (backup battery) that allows the date/time settings to be retained about three weeks after the battery pack has been removed.
- By inserting a charged battery or connecting an AC adapter kit (sold separately, p. 40) the date/time battery can be charged in about 4 hours even if the camera is not turned on.
- If the date/time battery is depleted, the Date/Time menu will appear when you turn the camera on. Follow the steps on p. 19 to set the date and time.

# **Setting the Display Language**


You can change the language displayed in the LCD monitor menus and messages.





Press the button.





 Press and hold the button 1, then immediately press the MENU button 2.



# Set the display language.

- Press the ▲▼◀▶ buttons to select a language, then press the (ﷺ) button.
- Once the display language has been set, the language menu will close.



# What if the clock appears when the ( button is pressed?

The clock will display if too much time passes between pressing the  $\textcircled{\textcircled{\#}}$  button and the **MENU** button in Step 2. If the clock appears, press the  $\textcircled{\textcircled{\#}}$  button to remove the clock and repeat Step 2.




You can also change the display language by pressing the **MENU** button, selecting the **††** tab, and selecting the [Language] menu item.


# **Formatting Memory Cards**

Before you use a new memory card or one that has been used in other devices, you should format the card with this camera. Formatting (initializing) a memory card erases all data on the memory card. As you cannot retrieve the erased data, exercise adequate caution before formatting the memory card.





Press the MENU button.



- Press the ◆ buttons to select the \*† tab.
- Press the ▲▼ buttons to select [Format], then press the ( button.







Format the memory card.

- Press the ♠ buttons to select [OK], then press the ( button.
- The memory card will be formatted.
- When formatting has finished, the menu screen will reappear.



Formatting or erasing data on a memory card merely changes the file management information on the card and does not ensure its contents are completely erased. Be careful when transferring or disposing of a memory card. When disposing of a memory card, take precautions such as physically destroying the card to prevent personal information leaks.





The total capacity of the memory card displayed in the formatting screen may be less than indicated on the memory card.


# **Pressing the Shutter Button**

The shutter button has two stops. To take images that are in focus, be sure to first press the shutter button lightly (halfway) to focus, then take the shot.









- The camera focuses and automatically selects the necessary settings for shooting, such as the brightness.
- When the camera focuses, it will beep twice and the indicator will light green.

# Press fully (to the second stop).

- The camera plays the shutter sound and takes the shot.
- Since the shot is being taken while the shutter sound plays, be careful not to move the camera.

# Does the length of the shutter sound change?


- Since the time required to shoot differs according to the scene you want to take, the length of the shutter sound may change.
- If the camera or subject moves while the shutter sound is playing, the recorded image may be blurry.



If you just press the shutter button fully without pausing halfway, the image may not be in focus.


# **MID** Taking Pictures

Since the camera can determine the subject and shooting conditions, you can let it automatically select the best settings for the scene and just shoot. The camera can also detect and focus on faces, setting the color and brightness to optimal levels.









## Turn on the camera.

- Press the ON/OFF button.
- The start-up sound will play, and the startup screen will appear.
- Pressing the ON/OFF button again will turn the camera off.

### Select the AUO mode.

- Set the mode switch to AUTO.
- When you point the camera toward the subject, the camera will make a slight noise as it determines the scene.
- The camera focuses on the subject it judges to be the main subject, and displays the icon for the determined scene in the upper left of the screen.
- When faces are detected, a white frame appears on the face of the main subject, while gray frames appear on other detected faces.
- Even if the detected faces move, the camera will follow the faces within a certain range.

# Compose the shot.

Moving the zoom lever toward [1] will zoom in on your subject, making it appear larger. Moving the lever toward [1] will zoom out from your subject, making it appear smaller.







Focus.

- Press the shutter button halfway to focus.
- When the camera focuses, it will beep twice and the indicator will light green (orange when the flash will fire).
- Green AF frames appear where the subject is in focus.
- Several AF frames will appear when the camera focuses on more than one point.

AF Frames



# Shoot.

- Press the shutter button fully.
- The camera will play the shutter sound and shoot. The flash will automatically fire in low light conditions.
- The indicator will blink green while the image is recorded to the memory card.
- The image will appear on the screen for about two seconds.
- You can take a second picture even while an image is displayed by pressing the shutter button.



### What if...

- The screen does not turn on when you turn on the camera?
   Press the DISP, button to turn on the screen.
- The camera does not play any sounds? Pressing the DISP, button while turning on the camera power will turn off all sounds except for warning sounds. To turn the sounds on, press the MENU button, select the Ŷ↑ tab, and then select [Mute]. Use the ◆ buttons to select [Off].

### **AUTO** Taking Pictures

- The image comes out dark even if the flash fired when shooting? The subject is too far away for the flash to reach. Shoot within the effective flash range of approximately 30 cm 3.5 m (12 in. 11 ft.) at maximum wide angle, and approximately 45 cm 2.0 m (1.5 6.6 ft.) at maximum telephoto.
- The indicator blinks orange and the camera beeps once when the shutter button is pressed halfway?

Your subject is too close. When the camera is at maximum wide angle, move about 3 cm (1.2 in.) or more away from your subject and shoot. Move about 45 cm (1.5 ft.) or more away when the camera is at maximum telephoto.

- The lamp lights when the shutter button is pressed halfway.
   To reduce red-eye and to assist in focusing, the lamp may light when shooting in dark areas.
- The \$ icon blinks when you try to take an image?
   When flash recharging begins, the flash icon will blink. You will be able to shoot once charging is complete.

### Scene Icons

The camera displays an icon for the scene it has determined and then automatically focuses and selects the optimum settings for subject brightness and color.

Background	Bri	ght	Including	Blue Skies	Dark		ark
Subject		Backlit		Backlit	Sunsets		When Using Tripod
People		07/		(T)	-	P	
Subjects Other Than People Landscapes	AUTO	1	AUTO	7/1	<b>1</b> 4	AUTO	<b>D</b>
Close Subjects	(4)	W	(4)	WIN	-	W)	_
Icon Background Color	Gr	ay	Light	Blue	Orange	Dark	Blue

<sup>\*</sup> Displays when the camera is attached to a tripod.



Under certain conditions, the icon that displays may not match the actual scene. Especially when there is an orange or blue colored background (a wall for example),  $\Sigma$  or the "Blue Skies" icons may appear and it may not be possible to shoot with the appropriate color. If this happens, try shooting in the **P** mode (p. 66).

# **▶** Viewing Images

You can view your images on the screen.






### Select the playback mode.

- Press the button.
- The last image you took will appear.





- Pressing the button will cycle through the images in reverse order.
- Pressing the button will cycle through the images in the order they were taken.
- The images change more quickly if you keep the ◀▶ buttons pressed, but they will appear coarse.
- Pressing the button while the lens is extended will cause the shooting screen to reappear.
- The lens will retract after approximately 1 minute elapses. If you press the ▶ button with the lens retracted, the power will turn off.





### Switching to and from playback mode

Pressing the **D** button while the camera is off turns the camera on in playback mode. Pressing it again turns the camera off. Pressing the shutter button halfway while in playback mode causes the shooting screen to reappear.

# **ℰ Erasing Images**

You can select and erase images one at a time. Please note that erased images cannot be recovered. Exercise adequate caution before erasing an image.



# Select the playback mode.

- Press the button.
  - The last image you took will appear.



# Select an image to erase.

Press the buttons to display an image to erase.



# Erase the image.

- Press the ▼ button.
- ► [Erase?] appears.
- Press the ◆ buttons to select [Erase], then press the ( button.
- ► The displayed image will be erased.
- To exit instead of erasing, press the buttons to select [Cancel], then press the button.







# **Printing Images**

You can easily print the images you have taken if you connect the camera to a PictBridge compliant printer (sold separately).

### **Items to Prepare**

- Camera and PictBridge compliant printer (sold separately)
- Interface cable supplied with the camera (p. 2)





# Connect the camera to the printer.

- Open the cover, and insert the small end of the plug firmly into the camera terminal in the direction shown.
- Insert the cable's larger plug into the printer. For connection details, refer to the user guide provided with the printer.



Turn on the printer.

### Turn on the camera.

- Press the button to turn on the camera.
- ▶ **/ SET** will appear.





Select an image to print.

Press the buttons to select an image.



#### **Printing Images**







- Press the (st) button.
- Use the ▲▼ buttons to select [Print], and press the button.
- Printing will start.
- If you want to print additional images, repeat Steps 5 and 6 after printing has completed.
- After printing has completed, turn off the camera and printer, and unplug the interface cable.



Refer to the *Personal Printing Guide* for details on the best ways to print.

### Canon-Brand PictBridge Compliant Printers (Sold Separately)

By connecting your camera to one of the Canon-brand PictBridge compliant printers below, you can print your images without having to use a computer.





Compact Photo Printers (SELPHY Series)



Inkjet Printers

For more information, visit your nearest Canon retailer.


# ' Shooting Movies

The camera can automatically select all settings so that you can shoot movies just by pressing the shutter button. If you continue shooting for a long time, the camera may become warm. This is not a malfunction.





Shooting Time





# Set the mode switch to \mathbb{\man

- Select the 7 mode.

# Compose the shot.

■ Moving the zoom lever toward 「♣ will zoom in on your subject, making it appear larger. Moving the lever toward | will zoom out from your subject, making it appear smaller.




- Press the shutter button halfway to focus.
- ▶ When the camera focuses, it will beep twice and the indicator will light green.

### R Shooting Movies





Elapsed Time



Microphone



### Shoot.

- Press the shutter button fully.
- The camera will start shooting the movie, and [● Rec] and the elapsed time will appear on the screen.
- Once shooting begins, take your finger off the shutter button.
- If you change the composition of your shot during shooting, the focus will stay the same, but the brightness and tone will automatically adjust.
- Do not touch the microphone while shooting.
- Do not press any buttons other than the shutter button. Otherwise, the sound the buttons make will be recorded in the movie.

# Stop shooting.

- Press the shutter button fully again.
- The camera will beep once and stop shooting the movie.
- ➤ The indicator will blink green, and the movie will record to the memory card.
- Shooting will automatically stop when the memory card fills.


### **Estimated Shooting Times**

Memory Card	2 GB	8 GB	
Shooting Time	10 min. 53 sec.	43 min. 32 sec.	

- Shooting times are based on default settings. Shooting time can be checked on the screen in Step 1.
- Recording will automatically stop when either the clip file size reaches 4 GB or the recording time reaches approximately 29 minutes and 59 seconds.

# **▶** Viewing Movies

You can view your movies on the screen.



# Select the playback mode.

- Press the button.
- ► The last image you shot will appear.
- ▶ SED appears on movies.



### Select a movie.

- Press the ♠ buttons to select a movie, then press the ( button.
- The movie control panel will appear on the screen



# Play the movie.

- Press the ♠ buttons to select ▶, then press the ∰ button.
- The movie will play.
- You can pause/resume the movie by pressing the ( button again.
- Press the ▲▼ buttons to adjust the volume.
- After the movie finishes. appears.







- When watching a movie on a computer, frames may drop, it may not play smoothly, and the audio may stop suddenly depending on the computer's capabilities.
- If you use the supplied software to copy the movie back onto the memory card, you can play back the movie smoothly. For enhanced playback you can also connect the camera to a TV.

# **Transferring Images to a Computer**

You can use the included software to transfer your camera images to a computer.

## **System Requirements**

Even though these are recommended system requirements, not all computer functions can be guaranteed.

#### Windows

OS	Windows Vista (including Service Pack 1) Windows XP Service Pack 2, Service Pack 3			
Computer model	The above OS si USB ports.	The above OS should be pre-installed on computers with built-in USB ports.		
CPU	Viewing images	Pentium 1.3 GHz or higher		
	Viewing movies	Core2 Duo 1.66 GHz or higher		
RAM	Viewing images	Windows Vista: 1 GB or more Windows XP: 512 MB or more		
	Viewing movies	1 GB or more		
Interface	USB	USB		
Free Hard Disk Space	Canon Utilities ZoomBrowser EX: 200 MB or more PhotoStitch: 40 MB or more			
Display	1,024 × 768 pixels or higher			

### Macintosh


OS	Mac OS X v10.4 – v10.5	
Computer model	The above OS should be pre-installed on computers with built-in USB ports.	
CPU	Viewing images	PowerPC G4/G5 or Intel Processor
	Viewing movies	Core Duo 1.66 GHz or higher
RAM	Viewing images	512 MB or more
	Viewing movies	1 GB or more
Interface	USB	
Free Hard Disk Space	Canon Utilities	ImageBrowser: 300 MB or more PhotoStitch: 50 MB or more
Display	1,024 × 768 pixels or higher	

### **Items to Prepare**

- Camera and computer
- DIGITAL CAMERA Solution Disk supplied with the camera (p. 2)
- Interface cable supplied with the camera (p. 2)

### **Preparations**

Windows XP and Mac OS X (v10.4) are used for these explanations.




#### Windows



- Place the DIGITAL CAMERA Solution Disk in the computer's CD-ROM drive. Begin installation.
  - Install the software.
    - Click [Easy Installation] and follow the onscreen instructions to proceed with the installation.
  - When the install finishes, click [Restart] or [Finish].
  - Remove the CD-ROM.
    - Remove the CD-ROM when your desktop screen appears.




#### Macintosh



- The screen on the left displays.
- Click [Install], and follow the onscreen instructions to proceed with the installation.



#### Transferring Images to a Computer











# Connect the camera to the computer.

- Turn off the camera.
- Open the cover, and insert the cable's small plug into the camera terminal in the direction as shown.
- Insert the cable's larger plug into the computer's USB port. For connection details, refer to the user guide provided with the computer.

### Turn on the camera.

Press the button to turn on the camera.

# Open CameraWindow.

#### Windows

- Select [Canon CameraWindow] and click [OK].
- CameraWindow will appear.
- If CameraWindow does not appear, click the [Start] menu and select [All Programs] or [Programs], followed by [Canon Utilities] ► [CameraWindow] ► [CameraWindow] ► [CameraWindow].



#### Macintosh

- CameraWindow will appear when you establish a connection between the camera and computer.
- If CameraWindow does not appear, click the [CameraWindow] icon on the Dock (the bar which appears at the bottom of the desktop).

## Transferring Images with a Computer




- Click [Transfer Untransferred Images].
- All images not previously transferred will transfer to the computer.
- After the transfer finishes, turn off the camera and unplug the cable.
- For further operations, refer to the Software Starter Guide.




Images transferred to the computer will be sorted by date and saved in separate folders in the "My Pictures" folder for Windows or the "Picture" folder for Macintosh

### Accessories

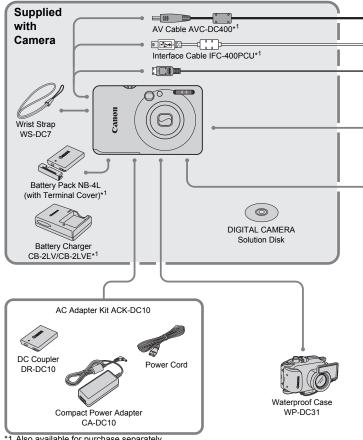

- \*1 Also available for purchase separately.
- \*2 See the user guide supplied with the printer for more information on the printer and interface cables.

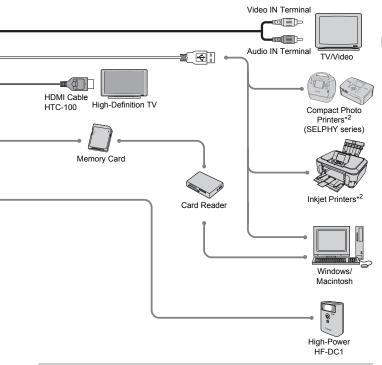

#### Use of genuine Canon accessories is recommended.

This product is designed to achieve excellent performance when used with genuine Canon accessories. Canon shall not be liable for any damage to this product and/or accidents such as fire, etc., caused by the malfunction of non-genuine Canon accessories (e.g., a leakage and/or explosion of a battery pack). Please note that this warranty does not apply to repairs arising out of the malfunction of non-genuine Canon accessories, although you may request such repairs on a chargeable basis.

# **Separately Sold Accessories**

The following camera accessories are sold separately.

Some accessories are not sold in some regions, or may no longer be available.

### **Power Supplies**

#### AC Adapter Kit ACK-DC10

This kit lets you power the camera using household power. Recommended for powering the camera for an extended period of time or when connecting to a computer. Cannot be used to charge the battery inside the camera.

#### Battery Charger CB-2LV/CB-2LVE

An adapter for charging Battery Pack NB-4L.

### Battery Pack NB-4L

Rechargeable lithium-ion battery.



### The battery charger can also be used when abroad.

The charger can be used in regions that have 100 - 240 V (50/60 Hz) AC power. If the plug does not fit the outlet, use a commercially available plug adapter. Do not use devices such as electrical transformers for foreign travel because they will cause malfunctions.

#### Other Accessories

#### HDMI Cable HTC-100

Use this cable to connect the camera to the HDMI™ terminal on a high-definition TV set.

### Waterproof Case WP-DC31

Installing the camera into this waterproof case lets you take underwater shots at depths down to 40 meters (130 feet), or take worry-free pictures in the rain, at the beach, or on the ski slopes.


#### High-Power Flash HF-DC1

This attachable supplementary flash can illuminate subjects that are too distant for the light from the built-in flash to reach.

# **Learning More**

This chapter explains the parts of the camera and what displays on the screen, as well as the basic operating instructions.


# **Components Guide**

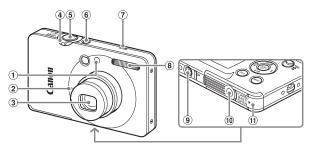


- Lamp (AF-Assist Beam (p. 136)/ Red-Eye Reduction Lamp (p. 137)/ Self-Timer Lamp (p. 64)
- 2 Microphone (p. 32)
- 3 Lens
- 5 Shutter Button (p. 23)
- 6 ON/OFF button
- ⑦ Speaker
- ® Flash (pp. 59, 66)
- 9 Tripod Socket
- 10 DC Coupler Terminal Cover (p. 142)
- 11) Memory Card / Battery Cover (p. 16)

#### **Mode Switch**

Use the mode switch to change shooting modes.



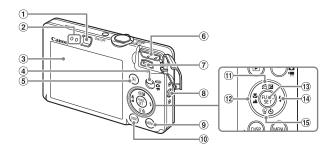


- 1 Viewfinder
- 2 Indicators (p. 46)
- 3 Screen (LCD Monitor) (p. 44)
- 4 Mode Switch
- ⑤ **▶** (Playback) Button (pp. 27, 139)
- 6 HDMI Out Mini Terminal
- ⑦ A/V OUT (Audio/Video Output) and DIGITAL Terminal
- ® Strap Mount (p. 13)
- 9 MENU Button (p. 48)

- 10 DISP. (Display) Button (pp. 44, 45)
- 11) ☑ (Exposure) (p. 71)/ 🗂 (Jump)
- (p. 103)/ ▲ Button

  ② 【 (Macro) (p. 67)/▲ (Infinity) (p. 67)/
  ◀ Button
- (p. 47)
- (4) **\$** (Flash) (pp. 59, 66)/ ▶ Button
- (Is (Self-Timer) (pp. 63, 64, 75, 76)/
  - (1 Erase Image) (p. 28)/ ▼ Button

# **Information Displayed on the Screen**

### **Shooting (Information Display)**



- Shooting Mode
- ② ISO Speed (p. 72)
- 3 White Balance (p. 73)
- 4 My Colors (p. 74)
- ⑤ Metering Modes (p. 83)
- 6 Drive Mode (p. 71)
- 7 Image Quality (Compression) (p. 69)/ Recording Pixels (p. 69)
- ® AE Point Frame (p. 83)
- 9 Digital Zoom Magnification (p. 60), Digital Tele-Converter (p. 61)

- 10 Macro (p. 67), Infinity (p. 67)
- 11 Flash Mode (pp. 59, 66)
- 12 Red-Eye Correction (p. 86)
- 13 Self-Timer (pp. 63, 64, 71.76)
- (14) Camera Orientation\*
- 15 Battery Charge Indicator (p. 15)
- 16 AF Frame (p. 25)
- 17 AF Lock (p. 82) (p. 85)
- 19 Time Zone (p. 133)
- 25 Image Stabilizer (p. 138) 26 Exposure Compensation

22 Disp. Overlay (p. 137)

20 Create Folder (p. 135)

21 Still Images: Recordable

Movies: Remaining Time

shots (p. 18)

23 Shutter Speed

24 Aperture Value

(p. 32)

- (p. 71)
- 27 Date Taken/Recorded (p. 62)
- 28 AE Lock (pp. 83, 96). FE Lock (p. 84)
- â : Standard, â â : Held vertically

When shooting, the camera detects if it is held vertically or horizontally, and adjusts settings accordingly for the best shot. It also detects orientation during playback, so you can hold the camera in either orientation and it will automatically rotate images for correct viewing.

This function may not operate correctly when the camera is pointed straight up or down.

#### Switching the Display


You can change the display using the DISP, button.



No Information Display Information Display

Display off

### **Playback (Detailed Information Display)**



- ① My Category (p. 118)
- ② Shooting Mode
- 3 Shutter Speed
- 4 Exposure Compensation (p. 71)
- 5 White Balance (p. 73)
- 6 Histogram (p. 46)7 Image Editing (pp. 120 –
- 125)

  8 Image Quality
- (Compression) (p. 69),
- 9 Recording Pixels (p. 69)

- Battery Charge Indicator(p. 15)
- 11 Metering Modes (p. 83)
- ① Folder Number File Number (p. 134)
- ① Displayed Image Number /Total Number of Images
- (4) ISO Speed (p. 72) (5) Aperture Value, Image
- Quality (Movies) (p. 94) (b) i-Contrast (pp. 85, 124)
- 17 Flash Sync (p. 66)

- (9) Macro (p. 67), Infinity (p. 67)
- 19 File Size (pp. 69, 95)
- ② Still Images: Recording Pixels (p. 69) Movies: Movie Length (p. 95)
- 21 Protect (p. 116)
- 22 My Colors (pp. 74, 123)
- ② Red-Eye Correction (pp. 86, 125)
- Shooting Date and Time (p. 62)

### Switching the Display

You can change the display using the DISP. button.



No Information
Display



Simple Information Display



Detailed Information Display



Focus Check Display (p. 108)



You can also switch the display by pressing the DISP, button while the image displays shortly after shooting. However, the Simple Information will not display.


### Display in Dark Conditions during Shooting

The display automatically brightens when shooting in dark conditions, allowing you to check the composition (Night Display function). However, the brightness of the image on the screen, and the brightness of the actual image recorded may be different. Screen noise may appear and the movement of the subject may appear somewhat jagged on the screen. This has no effect on the recorded image.

### Overexposure Warning during Playback

In "Detailed Information Display" (p. 45), overexposed areas of the image flash on the screen.

### Histogram during Playback



The graph that appears in "Detailed Information Display" (p. 45) is called the histogram. The histogram shows the distribution and amount of brightness of an image. When the graph approaches the right side, the image is bright, but when it approaches the left side, the image is dark, and in this way you can judge the exposure.

### **Indicators**

The indicators on the back of the camera (p. 43) will light or blink under the following conditions.

Colors	Status	Operation Status
Green	Lights	Shooting preparation complete (p. 25)/Display Off (p. 132)
	Blinks	Recording/reading/transmitting image data (p. 25)
Orange	Lights	Shooting preparation complete (flash on) (p. 25)
	Blinks	Camera shake warning (p. 59)
Yellow	Lights	<b>\$</b> (p. 67), ▲ (p. 67), AFL (p. 82)
	Blinks	Proximity warning (p. 26)/Cannot focus (p. 144)



When the indicator blinks green, data is being recorded to/read from the memory card or various information is being transmitted. Do not turn off the power, open the memory card slot/battery cover, shake or jolt the camera. These actions may corrupt the image data or cause the camera or memory card to malfunction.



# FUNC. Menu – Basic Operations

Commonly used shooting functions can be set with the FUNC. menu. The menu and menu items differ depending on the shooting mode (p. 148).



# Select a shooting mode.

Set the mode switch to the desired. shooting mode.



### Display the FUNC. menu.


Press the ( button.



Selectable Options Menu Items

### Select a menu item.

- Press the ▲▼ buttons to select a menu. item.
- The selectable settings for the menu item appear at the lower part of the screen.



- Press the buttons to select an option.
- You can also select settings by pressing the DISP, button on options that display DISP.





### Make the setting.

- Press the ( button.
- The shooting screen will reappear and the setting you selected will display on the screen.

# MENU Menu - Basic Operations


Various functions can be set from the menus. The menu items are organized under tabs, such as for shooting ( $\bigcirc$ ) and playback ( $\bigcirc$ ). The menu items differ depending on the mode (pp. 150 – 153).











### Display the menu.

Press the MENU button.

### Select a tab.

Press the ◀▶ buttons, or move the zoom lever (p. 42) left or right to select a tab (category).

### Select a menu item.

- Press the ▲▼ buttons to select a menu item.
- Some items require you to press the mount button to display a submenu in which you change the setting.

### Select an option.

Press the buttons to select an option.

# Make the setting.


- Press the MENU button.
- The standard screen will reappear.

# **Changing the Sound Settings**

You can silence or adjust the volume of camera sounds.

### **Muting Sounds**





- Press the MENU button.
- Select [Mute].


  - Press the ▲▼ buttons to select [Mute], then use the ◀▶ buttons to select [On].





### **Adjusting the Volume**





Press the MENU button.



- Press the ◆ buttons to select the \*† tab.
- Press the ▲▼ buttons to select [Volume], then press the ( button.





### Change the volume.

Press the ▲▼ buttons to select an item, then use the ◀▶ buttons to adjust the volume.

# **Changing the Screen Brightness**

The screen brightness can be changed in two ways.

### With the MENU Button





## Display the menu.

Press the MENU button.


### Select [LCD Brightness].

- Press the buttons to select the tab.
- Press the ▲▼ buttons to select [LCD Brightness].

### Change the brightness.

- Press the buttons to change the brightness.
- Press the MENU button again to complete the setting.

### With the DISP, Button



- Press the DISP, button for more than one second.
- The screen increases to maximum brightness regardless of the setting in the 11 tab.
- Pressing the DISP, button again for more than one second will return the screen to the original brightness.




- The next time you turn on the camera, the screen will be at the brightness setting selected in the ft tab.
- When you have set the brightness to its highest setting in the 
   †† tab, you cannot change the brightness with the DISP, button.

# **Returning the Camera to Default Settings**

When you have mistakenly changed a setting, you can reset the camera to the default settings.






Press the MENU button.



- Press the ◆ buttons to select the \*† tab.
  - Press the ▲▼ buttons to select [Reset All], then press the ( st) button.







# Reset the settings.

- Press the ◀▶ buttons to select [OK], then press the ( button.
- The camera will reset to the default settings.


# Are there functions that cannot be reset?

- The [Date/Time] (p. 19) in the 
   †† tab, [Language] (p. 21), [Video System]
   (p. 110), [Time Zone] (p. 133), the image registered as [Start-up Image] (p. 139).
- The saved data for custom white balance (p. 73).
- Colors that were selected in Color Accent (p. 89) or Color Swap (p. 90).


## **Low Level Memory Card Formatting**


Perform low level formatting when you think that the recording/reading speed of a memory card has dropped. Low level formatting a memory card completely erases all data on the memory card. As you cannot retrieve the erased data, exercise adequate caution before formatting the memory card.






Press the MENU button.





- Press the ◆ buttons to select the \*† tab.
- Press the ▲▼ buttons to select [Format], then press the ( st) button.



- Press the ▲▼ buttons to select [Low Level Format], then use the ◀▶ buttons to display √.
- Press the ▲▼◆ buttons to select [OK], then press the button.
- Low level formatting starts.



# About low level formatting

When the [Memory card error] message appears, or when the camera does not work correctly, low level formatting the memory card may solve the problem. Copy the images from the memory card to a computer or other device before low level formatting.



- Low level formatting may take longer than standard formatting (p. 22), since all recorded data are erased.
- You can stop a low level format of a memory card by selecting [Stop].
   When stopping low level formatting, the data will be erased but the memory card can be used without problem.

# **Power Saving Function (Auto Power Down)**

To save battery power, the camera shuts down automatically when it is not operated for a certain time.

### **Power Saving during Shooting**

The monitor will turn off approximately 1 minute after the camera is last operated. After about 2 more minutes, the lens will retract and the power will turn off. When the monitor has turned off but the lens has not retracted yet, pressing the shutter button halfway (p. 23) turns on the monitor and shooting can continue.

### Power Saving during Playback

The power will turn off approximately 5 minutes after the camera is last operated.



- You can turn off the Power Saving Function (p. 132).
- You can adjust the time before the monitor turns off (p. 132).

### **Changing the Image Display Time**

You can change the length of time the images display directly after shooting.







Set the mode switch to .

### Display the menu.

Press the MENU button.

### Select [Review].

- Press the \(\phi\) buttons to select the \(\bar{\to}\) tab.
- Press the ▲▼ buttons to select [Review], then press the ◀▶ buttons to select the display time or setting.
- If you select [Off], the image will not display.
- If you select [Hold], the image displays until you press the shutter button halfway.

### **Clock Functions**

You can check the current time.



- Hold the button pressed.
- A screen like that on the left appears showing the current time.
- You can change the display color by changing the camera's orientation and pressing the buttons.
- Press the button to cancel the clock display.



Press and hold the  $\ensuremath{\textcircled{\textcircled{m}}}$  button, then press the ON/OFF button to display the clock.

# Shooting in Special Conditions and Commonly Used Functions

This chapter explains how to shoot in different conditions, as well as how to use other common functions, such as the flash and self-timer.





- When you select a mode that matches a particular set of conditions, the camera will automatically select any necessary settings. All you need do is press the shutter button to take an optimized picture.
- This chapter assumes the mode is set to (AUTO) for (\*) Turning the Flash Off" (p. 59) to (\*) Using the Face Self-Timer" (p. 64).

# **Shooting in Various Conditions**

The camera will select the necessary settings for the conditions in which you wish to shoot when you select the matching mode.











# Set the mode switch to (p. 42).

# Select the shooting mode.

Press the ( button, then use the ▲▼ buttons to select P.

### Select the desired shooting mode.

- Press the ♠ buttons to select an option, then press the ( button.
- Shoot.

### Take portraits (Portrait)

 Produces a soft effect when photographing people.

# Take snapshots at night (Night Snapshot)

- Lets you take beautiful snapshots of people against city nightscapes or night backgrounds.
- If you hold the camera firmly, you can take pictures with reduced camera shake, even without a tripod.



# Take shots of kids and pets (Kids&Pets)

 Lets you capture subjects that move around, such as children and pets, without missing photo opportunities.



### Take indoor shots (Indoor)

Lets you shoot indoors with natural colors.

### **Special Conditions**



### Shoot sunsets (Sunset)

 Lets you take shots of sunsets in vivid colors.



### 

Lets you take shots of fireworks in vivid colors



# Take shots of people at the beach (Beach)

 Lets you take bright shots of people on sandy beaches where the reflected sunlight is strong.

#### Shooting in Various Conditions











### Shoot underwater (Underwater)

 Lets you shoot underwater with Waterproof Case WP-DC31 (sold separately).

# Take shots of aquatic life in an aquarium (Aquarium)

 Lets you take natural-colored shots of aquatic life in indoor aquariums.

### **№** Take shots of foliage (Foliage)

 Lets you shoot trees and leaves, such as new growth, autumn leaves or blossoms, in vivid colors

# \*Take shots of people in snow (Snow)

 Lets you take bright, natural-colored shots of people against snowy backgrounds.

# Shoot using high ISO speed (ISO3200)

- Sets the ISO speed to 3200, and lets you shoot without camera shake or subject blurring even in low light conditions.
- Recording pixels are set to M3 (1600 × 1200 pixels, p. 69).




- In M, S, ⊮, w or mode, images may appear coarse because the ISO speed (p. 72) is increased to match the shooting conditions.
- In mode, attach the camera to a tripod to prevent the camera from moving and blurring the image. Additionally, you are recommended to set [IS Mode] to [Off] (p. 138).
- In mode, images may appear coarse.

# Turning the Flash Off

You can shoot with the flash turned off.









- Press the ◀▶ buttons to select ⑤, then press the ⑤ button.
- will appear on the screen.
- Follow the steps above to return the setting to \$\frac{1}{4}^A\$.






# What if the indicator blinks orange and a flashing Q appears?

When you press the shutter button halfway in low light conditions where camera shake is likely, the indicator will blink orange and a flashing will appear on the screen. Attach the camera to a tripod to prevent it from moving.

# Zooming in More Closely on Subjects (Digital Zoom)

You can use the digital zoom to zoom up to a maximum of 12x and capture subjects that are too far away for the optical zoom (p. 24) to enlarge. The images may appear coarse, however, depending on the recording pixel setting (p. 69) and the zoom factor used.





### Move the zoom lever toward ♠.

- Hold the lever until zooming stops.
- When you release the zoom lever, the largest possible zoom factor without image deterioration, and \*I\* will appear.
- Move it toward again.
  - ► The digital zoom will further zoom in on the subject.

### Zoom Factors at which Images Deteriorate

Recording Pixels	Optical Zoom	Digital Zoom
L	3.0x →	
M1	3.7	x→
M2		4.6x →
М3		7.5x →
S		12x →

- : No image deterioration (zoom factor appears white)
- : Image deterioration (zoom factor appears blue)
- → : Maximum zoom factor without deterioration (Safety Zoom)

### (a) Turning off the digital zoom

To turn off the digital zoom, press the  $\mbox{MENU}$  button, select the  $\mbox{\ \ \, }$  tab, and select [Digital Zoom] and the [Off] option.



The focal length when using digital zoom is 33 – 400 mm (35mm film equivalent).

### **☐** Digital Tele-Converter

The focal length of the lens can be increased by an equivalent of 1.5x or 2.0x. This enables a faster shutter speed and less chance of camera shake than the zoom (including digital zoom) used by itself at the same zoom factor.

The images may appear coarse, however, depending on the combination of recording pixel (p. 69) and digital tele-converter settings used.





### Select [Digital Zoom].

- Press the MENU button.
- Press the ◆ buttons to select the 
   tab, then press the ▲▼ buttons to select
  [Digital Zoom].

### Accept the setting.

- Press the ◀▶ buttons to select [1.5x] or [2.0x].
- Pressing the MENU button will restore the shooting screen.
- The view will be enlarged, and and the zoom factor will display on the screen.
- To return to standard digital zoom, select [Digital Zoom] and the [Standard] option.

### **Combinations that Cause Image Deterioration**

- Using [1.5x] at a recording pixel setting of L or M1 will cause image deterioration ( and the zoom factor will display in blue).
- Using [2.0x] at a recording pixel setting of L, M1 or M2 will cause image deterioration ( and the zoom factor will display in blue).



- The respective focal lengths when using [1.5x] and [2.0x] are 49.5 150 mm and 66 200 mm (35mm film equivalent).
- The digital tele-converter cannot be used together with the digital zoom.

# **Inserting the Date and Time**

You can insert the shooting date and time in the lower right corner of an image. Once inserted, however, they cannot be deleted. Be sure to check beforehand that the date and time are correctly set (p. 19).











### Select [Date Stamp].

- Press the MENU button.

### Accept the setting.

- Use the ◀▶ buttons to select [Date] or [Date & Time].
- Pressing the MENU button will restore the shooting screen.
- ► [DATE] will appear on the screen.

### Shoot.

- You can insert the shooting date and time in the image's lower right corner.
- To restore to the original setting, select [Off] in Step 1.



Inserting and printing the date and time in images which do not have an embedded date and time

- Use the DPOF print settings (p. 126) to print.
- Use the included software to print.

  Refer to the Software Starter Guide for details.
- Connect the camera to a printer to print.
   Refer to the Personal Printing Guide for details.

# ৌ Using the Self-Timer

The self-timer can be used to shoot a group photo that includes the camera operator. The camera will activate approximately 10 seconds after the shutter button is pressed.









- Press the ▲▼ buttons to select (10), then press the (19) button.
- Nonce set, ☼ will appear.







- Press the shutter button halfway to focus on the subject, then press it fully.
- When the self-timer starts, the lamp blinks and the self-timer sound plays.
- Two seconds before the shutter releases, the lamp and sound speed up (the lamp remains lit when the flash will fire).
- To restore the original setting, select in Step 2.



You can change the delay time and number of shots (p. 76).

# ( Using the Face Self-Timer


Once you compose the shot, such as for a group photo, and press the shutter button, the camera will take three shots in a row two seconds after it detects your face (p. 80) when you enter the composition.





### Select 📆.

Follow Step 2 on p. 63 and select ☼.



Make sure a green frame appears on the face of the focused subject and white frames appear on other faces.



### Press the shutter button fully.

- The camera will enter shooting stand-by, and [Look straight at camera to start count down] will appear on the screen.
- The lamp will blink and the self-timer sound will play.



### Join the subjects and look at the camera.

- When the camera detects a new face, the lamp and sound will speed up (the lamp remains lit when the flash will fire), and two seconds later the shutter will release.
- The second and third shots will continue in succession.
- To restore the original setting, select in Step 2 on p. 63.



### What if a face is not detected?

Even if your face is not detected after joining the subjects, the shutter will release approximately 30 seconds later.



### Changing the number of shots

For the screen in Step 1, press the MENU button, then press the ◀▶ buttons to change the number of shots. Press the (NE) button to accept the setting.

# **Selecting Settings Yourself**

In this chapter you will learn how to use the various functions in **P** mode to progressively advance your shooting skills.



- This chapter assumes that the mode switch is set to and the camera is in P mode.
- P stands for Program AE.
- Before attempting to shoot using a function explained in this chapter in modes other than P mode, check if the function is available in those modes (pp. 148 – 151).

# P Shooting in Program AE

You can select the settings for various functions to suit your preferences. AE stands for Auto Exposure.





### Set the mode switch to (p. 42).



 If P does not appear, press the ( button and select the shooting mode item. Press the **\Delta** buttons to select **P** and press the ( button.



- Adjust the settings according to your purposes (pp. 66 - 76).
  - Shoot.



#### What if the shutter speed and aperture value are displayed in red?

If a correct exposure cannot be obtained when pressing the shutter button halfway, the shutter speed and aperture value display in red. Try the following settings to obtain the correct exposure.

- Turn on the flash
- Select a higher ISO speed (p. 72)

# **¼** Turning the Flash On

You can make the flash fire every time you shoot. At maximum wide angle, the flash range is approximately 30 cm - 3.5 m (12 in. - 11 ft.), and at maximum telephoto, it is 45 cm - 2.0 m (1.5 - 6.6 ft.).



### Select 4.

- After pressing the button, press the buttons to select \$, then press the (ser) hutton
- Once set. \$\forall \text{ will appear.}

# Shooting Close-ups (Macro)

You can shoot an object at a close distance or even shoot extreme closeups of it. The possible shooting range is approximately 3 – 50 cm (1.2 in. – 1.6 ft.) from the end of the lens when the zoom lever is moved to the maximum wide angle.



### Select 3.

- After pressing the ◀ button, press the ◀buttons to select ♥, then press the ⊕ button.
- Once set, will appear.



### Using 😭

You are recommended to attach the camera to a tripod and shoot in  $\mathfrak{S}$ , to prevent the camera from moving and blurring the image (p. 75).



The edges of the image may darken if the flash fires.

# ▲ Shooting Far Away Subjects (Infinity)

You can shoot landscapes and far away subjects. The focusing range is 3 m (9.8 ft.) and greater from the camera.



### Select .

- After pressing the ◀ button, press the ◀ buttons to select ▲, then press the ⊕ button
- Once set, will appear.

# **Ø** Zooming In on Close Subjects (Digital Macro)


You can zoom in on close subjects. With the zoom lever set to the maximum wide angle, the possible shooting range is approximately  $3-10 \, \mathrm{cm} \, (1.2-3.9 \, \mathrm{in.})$  from the end of the lens. However, you can zoom in even closer on the subject using the digital zoom.

The digital zoom may cause images to appear coarse at some recording pixel settings (p. 69).



### ■ Select ♥

- Set the mode switch to then press the button.
- Press the ▲▼ buttons to select P.
- Press the buttons to select (rightmost icon), then press the DISP.
   button.
- Press the ♠ buttons to select ♥, then press the ∰ button.
- The optical zoom will lock at the maximum wide angle.



The camera will zoom in and the zoom factor will appear.

### Zoom Factors at which Images Deteriorate

- No image deterioration (zoom factor appears white)
- Image deterioration (zoom factor appears blue)



You are recommended to attach the camera to a tripod and shoot in  $\mathfrak{S}$ , to prevent the camera from moving and blurring the image (p. 75).

# **Changing the Recording Pixels**

You can select the recording pixels (image size) from six settings.



### Select the recording pixels.

- Select an option.
  - Press the ◆▶ buttons to select an option, then press the (ﷺ) button.
  - The setting you selected will display on the screen.



If you select M, you cannot use the Digital Zoom (p. 60) or Digital Tele-Converter (p. 61).

# Changing the Image Quality (Compression Ratio)

You can select from the following two levels of image quality:

(Fine), I (Normal).



### Select the recording pixels.


- Select an option.
  - Press the DISP. button.
  - Press the ♠ buttons to select an option, then press the ♠ button.
  - The setting you selected will display on the screen.

### Approximate Values for Recording Pixels and Image Quality

	Compression Ratio	Single Image Data Size (Approx. KB)	Number of Recordable Images	
Recording Pixels			2 GB	8 GB
<b>L</b> (Large) 12 M/4000 × 3000		3084	626	2505
		1474	1280	5116
<b>M1</b> (Medium 1) 8 M/3264 × 2448		2060	930	3721
		980	1920	7675
<b>M2</b> (Medium 2) 5 M/2592 × 1944		1395	1365	5457
		695	2672	10679
M3 (Medium 3) 2 M/1600 × 1200		558	3235	12927
		278	6146	24562
<b>S</b> (Small) 0.3 M/640 × 480		150	10245	40937
		84	15368	61406
W (Widescreen)	4	2311	830	3318
4000 × 2248		1105	1707	6822

The values in the table are measured according to Canon standards and may change depending on the subject, memory card and camera settings.

### Approximate Values for Paper Size



- S Suitable for sending images as e-mail attachments.
- For printing on wide size paper.

# Adjusting the Brightness (Exposure Compensation)

You can adjust the standard exposure set by the camera in 1/3-stop increments in the range of -2 to +2.



# Select the exposure compensation.

- After pressing the ▲ button, press the ◀▶ buttons to adjust the exposure compensation, then press the ∰ button.
- The compensation range you set will display on the screen.

# Continuous Shooting

You can shoot continuously at about 0.8 images/second.



### Select the drive mode.

- After pressing the ( button, press the buttons to select □.
- > Select 및.
  - Press the ◆ buttons to select □, then press the ⊕ button.
  - ▶ Once set, ☐ will appear on the screen.
- 3 Shoot.
  - As long as you hold the shutter button down, the camera will shoot successive images.



- Cannot be used with the self-timer (pp. 63, 64, 75, 76).
- For continuous shooting, the focus and exposure are locked when the shutter button is pressed halfway.
- As the number of images increases, the shooting intervals may take longer.
- If the flash fires, shooting intervals may take longer.

# **Changing the ISO Speed**



### Select the ISO speed.

After pressing the ( button, press the buttons to select ( button)

### Select an option.

- Press the ◀▶ buttons to select an option, then press the ∰ button.
- The setting you selected will display on the screen.

### **Approximate Values for ISO Speed**

NTO	Automatically adjusts the ISO speed to the shooting mode and shooting conditions.		
150 150 150 80 100 200	Low thigh	Fine weather conditions, outdoor shooting.	
150 150 400 800		Cloudy, Twilight	
1600		Nightscapes, Dark interiors	

# Ä

### Changing the ISO speed

- Lowering the ISO speed results in sharper images, but there may be an increased chance of image blurring in certain shooting conditions.
- Raising the ISO speed results in a faster shutter speed, reducing camera shake and letting the flash reach greater distances to the subject. The images, however, will appear coarse.



- With ISO 3200 you can set an even faster speed (p. 58).

# **Adjusting the White Balance**

The white balance (WB) function sets the optimal white balance for natural looking colors.



### Select the white balance.

- After pressing the ( button, press the buttons to select AWB.
- Select an option.
  - Press the ◀▶ buttons to select an option, then press the ( button.
  - The setting you selected will display on the screen.

AWB	Auto	Automatically sets the optimal white balance for the shooting conditions.
*	Day Light	Fine weather conditions, outdoor shooting
2	Cloudy	Cloudy, shady, twilight conditions
-	Tungsten	Tungsten, bulb-type (3-wavelength) fluorescent lighting
111	Fluorescent	Warm-white fluorescent, cool-white fluorescent, warm-white-type (3-wavelength) fluorescent lighting
 	Fluorescent H	Daylight fluorescent, daylight-type (3-wavelength) fluorescent lighting
	Custom	Manually sets a custom white balance.

### Custom White Balance

You can adjust the white balance to the light source at the shooting location. Make sure that you set the white balance under the lighting conditions of the shooting scene.



- In Step 2 above, select
- Make sure the entire screen is filled with the white subject, then press the DISP. button.
- The tint on the screen will change when a white balance data is set.

# Changing the Tone of an Image (My Colors)

You can change the tone of an image to sepia or black and white when shooting.





### Select My Colors.

 After pressing the (sg) button, press the ▲▼ buttons to select of.

# Select an option.

- Press the buttons to select an option, then press the ( button.
- The setting you selected will display on the screen.
- After shooting, return the setting to Off.

₹ÔFF	My Colors Off	_
٩v	Vivid	Emphasizes the contrast and color saturation for a vivid impression.
∂ <sub>N</sub>	Neutral	Tones down the contrast and color saturation for neutral hues.
£se	Sepia	Sepia tones.
₽₩	B/W	Black and white.
βp	Positive Film	Like the Vivid Red, Vivid Green or Vivid Blue effects, produces intense natural appearing colors like those obtained with positive film.
$A_{L}$	Lighter Skin Tone	Makes skin tones lighter.
₽ <sub>D</sub>	Darker Skin Tone	Makes skin tones darker.
₽B	Vivid Blue	Emphasizes blue tints. Makes the sky, ocean and other blue subjects more vivid.
₿G	Vivid Green	Emphasizes green tints. Makes mountains, foliage and other green subjects more vivid.
$A_{R}$	Vivid Red	Emphasizes red tints. Makes red subjects more vivid.
A <sub>C</sub>	Custom Color	You can adjust contrast, sharpness, and color saturation etc. to your preference.



- The white balance cannot be set in the  $\mathcal{L}_{e}$  and  $\mathcal{L}_{e}$  modes (p. 73).
- In the  $\theta_{\rm L}$  and  $\theta_{\rm D}$  modes, colors other than people's skin color may change. You may not obtain the expected results with some skin colors.

### Ac Custom Color

The contrast, sharpness, color saturation, red, green, blue, and skin tones in an image can be selected and set from 5 different levels.



- Follow Step 2 on page 74 and select ⊕c, then press the DISP, button.
- Press the ▲▼ buttons to select an option, then use the ◀▶ buttons to select a value.
- The more to the right, the stronger/deeper the effect gets, the more to the left, the weaker/lighter the effect gets.
- Press the DISP, button to accept the setting.

# ♦ Shooting Using the Two Second Self-Timer

You can set the self-timer to a delay of approximately two seconds.



### Select 🔌.

- After pressing the ▼ button, press the
   ▲▼ buttons to select ②, then press the
   ★ button.
- Once set, 2 will appear.
- Follow Step 3 in "(1) Using the Self-Timer"
   (p. 63) to shoot.


# ℃ Customizing the Self-Timer

You can set the time delay (0 - 30 seconds) and the number of shots taken (1 - 10 shots).





After pressing the ▼ button, press the ▲▼ buttons to select 않, then immediately press the MENU button.



- Press the ▲▼ buttons to select [Delay] or [Shots].
- Press the ♠ buttons to select a value, then press the ( button.
- Follow Step 3 in "(1) Using the Self-Timer"
   (p. 63) to shoot.



### What if the number of shots is set to two or more shots?

- Exposure and white balance settings are set with the first shot.
- When you set the time delay for more than 2 seconds, the self-timer lamp and sound speed up 2 seconds before the shutter releases (when the flash will fire, the lamp lights).



- If the flash fires, the shooting interval may be longer.
- If you set a high number of shots, the shooting interval may be longer.
- If the memory card becomes full, shooting stops automatically.

## **Shooting Using a TV Monitor**

You can use a TV to display the camera screen content.

- Connect the camera to a TV as described in "Viewing Images on a TV" (p. 110).
- Shooting procedures are the same as when using the camera's monitor.



TV display is not available when using the HDMI Cable HTC-100 (sold separately) to connect the camera to a high-definition TV.

# Changing the Composition with the Focus Lock

While you press and hold the shutter button halfway, the focus and exposure are fixed. You can now recompose and shoot. This is called Focus Lock.





- Center the subject you want in focus, and press the shutter button halfway.
- Confirm that the AF Frame on the subject is green.



## Recompose.


Hold the shutter button pressed halfway and recompose the scene.

### Shoot.

Press the shutter button fully.

# **Shooting Using the Viewfinder**

If you want to save battery power, you can use the viewfinder for shooting, instead of the screen. Shooting procedures are the same as when using the screen. The camera will automatically focus on the subject, it will not use face detection to focus.



### Turn off the screen (p. 44).

Press the DISP, button to turn off the screen.

### Compose and shoot.

Use the viewfinder to compose and shoot.



The view in the viewfinder and the image taken may differ.



# Getting More Out of Your Camera

This chapter serves as the advanced version of Chapter 4 and explains how to take pictures using various functions.



- This chapter assumes that the mode switch is set to and the camera is in P mode.
- "★ Shooting Long Exposures" (p. 88), "Changing the Color and Shooting" (p. 89) and "□ Shooting Stitch Assist Images" (p. 92) assume you have set the mode switch to and selected the corresponding mode.
- Before attempting to shoot using a function explained in this chapter in modes other than P mode, check if the function is available in those modes (pp. 148 – 151).

# **Changing the AF Frame Mode**

You can change the AF (Auto Focus) frame mode to match the conditions you want to shoot.



### Select [AF Frame].

Press the MENU button, select the tab, select [AF Frame], then press the buttons to select an option.

#### Face AiAF

- Detects people's faces and sets the focus, exposure (evaluative metering only) and white balance ( W only).
- When the camera is pointed at subjects, a white frame appears on the face the camera judges to be the main subject, and gray frames (max. 2) will appear on other faces. When the shutter button is pressed halfway, up to 9 green frames will appear on faces on which the camera focuses.



- If a face is not detected and only gray frames (no white frame) appear, up to 9 green frames will appear on the areas the camera focuses on when the shutter button is pressed halfway.
- Examples of faces that cannot be detected:
  - Subjects that are far away or extremely close.
  - Subjects that are dark or light.
  - Faces turned to the side or at a diagonal, or faces with a portion hidden.
- The camera may mistakenly identify non-human subjects as a face.
- If the camera cannot focus when you press the shutter button halfway, the AF frame will not appear.

### Center

The AF frame is fixed at the center. This is effective for focusing on a specific point.



### You can reduce the AF frame size

- Press the MENU button, select the tab, then select the [AF Frame Size] menu item and [Small] option.
- The setting is configured to [Normal] when the Digital Zoom (p. 60) or Digital Tele-converter (p. 61) is used.



If the camera cannot focus when you press the shutter button halfway, the AF frame will turn yellow.

## **Magnifying the Focal Point**

If you press the shutter button halfway, the AF frame will magnify and you can check the focus.





 Press the MENU button and select [AF-Point Zoom] on the tab. Use the tab.



### Check the focus.

- Press the shutter button halfway.
- In [Face AiAF], the face selected as the main subject will appear magnified.
- In [Center], the contents of the center AF frame will appear magnified.



### What if the display does not magnify?

The display will not appear magnified in [Face AiAF] mode if a face cannot be detected (p. 80) or is too big in relation to the screen. In [Center] mode, it will not appear magnified if the camera cannot focus.



The magnified display will not appear when using the Digital Zoom (p. 60) or Digital Tele-Converter (p. 61), or when connected to a TV (p. 76).

# AFL Shooting with the AF Lock

The focus can be locked. After locking the focus, the focal distance will not change even when you release your finger from the shutter button.





### Lock the focus.

- Keep the shutter button pressed halfway and press the ◀ button.
- The focus locks and AFL is displayed on the screen.
- If you release your finger from the shutter button, and press the ◀ button once more, AFL will disappear and the focus will unlock
- Compose the scene and shoot.

# **Shooting with Servo AF**

Since focus will be maintained on a subject while you press the shutter button halfway, you can shoot moving subjects without missing photo opportunities.



# Select [Servo AF].

 Press the MENU button and select [Servo AF] on the tab, and use the buttons to select [On].



While the shutter button is pressed halfway, the focus will continue to adjust on the spot where the blue frame appears.



- The camera may not be able to focus in some conditions.
- You cannot shoot with the AF lock in this mode.
- You cannot set the Servo AF mode if you have set the [AF-Point Zoom] option in the tab to [On].
- Not available in FaceSelf-Timer (p. 64).

# **Changing the Metering Mode**

You can change the metering mode (brightness measuring function) to match the shooting conditions.



### Select the metering mode.

- After pressing the ( button, press the buttons to select buttons to select column buttons to select colum
- Select an option.
  - Press the ◀▶ buttons to select an option, then press the ( button.
  - The setting will display on the screen.

	The setting will display on the selecti.
S Evaluative	Suitable for standard shooting conditions, including back lit shots. Automatically adjusts the exposure to match the shooting conditions.
Center Weighted Avg.	Averages the light metered from the entire frame, but gives greater weight to the center.
[•] Spot	Only meters within the [ ] (Spot AE Point frame) that appears at the center of the screen.

# AEL Shooting with the AE Lock

When you wish to take several shots with the same exposure, you can set the exposure and focus separately using the AE lock. AE stands for "Auto Exposure".





### Lock the exposure.

- Point the camera toward the subject and press the button while pressing the shutter button halfway.
- ▶ When AEL appears, the exposure will be set.
- If you release your finger from the shutter button and press the button again, AEL will disappear and the AE will unlock.
- Compose the scene and shoot.

# FEL Shooting with the FE Lock

Just as with the AE lock (p. 83), you can lock the exposure for shooting with the flash. FE stands for "Flash Exposure".



### Select \$ (p. 66).





- Lock the exposure.
  - Point the camera toward the subject and press the button while pressing the shutter button halfway.
  - ► The flash will fire and when FEL appears, the flash output will be retained.
  - If you release your finger from the shutter button and press the button again, FEL will disappear and the FE will unlock.
- Compose the scene and shoot.

# **\$** Shooting with Slow Synchro

You can make the main subject, such as people, appear bright by having the camera provide the appropriate illumination with the flash. At the same time, you can use a slow shutter speed to brighten the background that the light from the flash cannot reach.



### Select ‡.\*.

- After pressing the ▶ button, press the ◀▶ buttons to select ¼\*, then press the ∰ button.
- ▶ Once set, ¼ will appear on the screen.
- Even if the flash fires, ensure that the subject does not move until the shutter sound ends.



Attach the camera to a tripod to prevent the camera from moving and blurring the image. It is recommended to set the [IS Mode] to [Off] when shooting with a tripod (p. 138).

# Ci Making Dark Subjects Appear Brighter (i-Contrast)

The camera can automatically detect and compensate for faces or subjects that appear dark in certain shooting conditions.





- Press the MENU button, select [i-Contrast] from the tab, and use the
  - **♦** buttons to select [Auto].
- ▶ C₁ will appear on the screen.





Under some conditions, the image may appear coarse or the exposure setting may not be suitable.



You can correct recorded images (p. 124).

# ® Red-Eye Correction

You can automatically correct red eyes in images taken with the flash.





Press the MENU button, select [Flash Settings] from the tab and press the button.



# Adjust the setting.

- Press the ▲▼ buttons to select [Red-Eye Corr.] and press the ◀▶ buttons to select [On].
- will appear on the screen (p. 44).



Red-eye correction may be applied to other red parts than red eyes. For example, when red make-up has been used around eyes.



- You can correct recorded images (p. 125).
- If you press the button as shown on the screen in Step 2 and then press the MENU button, the Flash Settings screen will display (p. 48).

# **Checking for Shut Eyes**

When the camera detects that there is a possibility that people have their eyes shut, 🔄 appears.



### Select [Blink Detection].

Press the MENU button, select the tab, and then select [Blink Detection]. Use the ◆ buttons to select [On].

### Shoot.

When a person with shut eyes is detected, a frame and 

appear for a few seconds.



In  $\biguplus, \circlearrowleft$  and  $\circlearrowright$  mode, the function is only available for the last image shot.

# ★ Shooting Long Exposures

You can set the shutter speed to a range between 1 and 15 seconds to shoot long exposures. However, you should attach the camera to a tripod to prevent the camera from moving and blurring the image.





### Select ★.

- Set the mode switch to ... the press the ( button.
- Press the A buttons to select P.
- Press the buttons to select (rightmost icon), then press the DISP. button
- Press the ◀▶ buttons to select ★, then press the (SE) button.





### Select the shutter speed.

- Press the A button.
- Press the buttons, select shutter speed and press the (SET) button.

### Confirm the exposure.

When you press the shutter button halfway, the exposure for the selected shutter speed will appear.



- The brightness of the image may differ from the brightness of the screen in Step 3 when the shutter button was pressed halfway.
- When shutter speeds of 1.3 seconds or slower are used, images are processed to eliminate noise after being taken. A certain amount of processing time may be needed before you can take the next shot.
- It is recommended to set the [IS Model to [Off] when shooting with a tripod (p. 138).



If the flash fires, the image may be overexposed. If this happens, set the flash to (2) and shoot.

# **Changing the Color and Shooting**

You can change the look of an image when shooting. However, the shooting conditions may cause the image to become coarse, or the colors may not come out as expected.

### **I**A Color Accent

You can select to retain a single color and change the rest to black and white in a composition.



### Select ∤A.

- Set the mode switch to , then press the button.
- Press the ▲▼ buttons to select P.
- Press the buttons to select (rightmost icon), then press the DISP. button.
- Press the ♠ buttons to select A, then press the ⊕ button.

### Press the DISP button.

- The unchanged image and the Color Accent image will both display.
- The color for default settings is green.

### Specify the color.

- Position the center frame so it is filled with the color you want and press the ◀ button.
- The specified color will be recorded.



- Press the ▲▼ buttons to change the range of colors to be retained.
- Select a negative value to limit the range of colors. Select a positive value to extend the range of colors to similar colors.
- Pressing the DISP, button accepts the setting and restores the shooting screen.



Recorded color



- Using the flash may cause unexpected results in this mode.
- The recorded color will be saved even if you turn off the power.

## **/**S Color Swap

You can swap one color in an image for another when recording it. You can only swap one color.





- Set the mode switch to , the press the button.
- Press the ▲▼ buttons to select P.
- Press the buttons to select (rightmost icon), then press the DISP. button.
- Press the ◆ buttons to select \$\struct S\$, then press the \$\square\$ button.



## Press the DISP, button.

- The unchanged image and the Color Swap image will both display.
- The default setting is to change green to gray.



### Specify the color to be swapped.

- Position the center frame so it is filled with the color you want and press the ◀ button.
- The specified color will be recorded.



### Specify the target color.

- Position the center frame so it is filled with the color you want and press the button.
- The specified color will be recorded.

# Specify the range of colors to be swapped.

- Press the ▲▼ buttons to adjust the range of colors affected.
- Select a negative value to limit the range of colors. Select a positive value to extend the range of colors to similar colors.
- Pressing the DISP, button accepts the setting and restores the shooting screen.




- Using the flash may cause unexpected results in this mode.
- The recorded color and range of colors will be saved even if you turn off the power.
- Under some conditions, the image may appear coarse.


# □ Shooting Stitch Assist Images

Large subjects can be split into several shots that can later be merged together using the included software on a computer to create a panoramic image.





- Set the mode switch to , the press the button.
- Press the ▲▼ buttons to select P.
- Press the ◆ buttons to select (rightmost icon), then press the DISP. button.
- Press the ◆ buttons to select ☐ or ☐, then press the ( button.



➤ The exposure and white balance will be set with the first shot.

### Take subsequent shots.

- Overlap part of the first shot when taking the second shot.
- Minor discrepancies in the overlapping portions will be corrected when the images are merged.
- You can repeat the procedure for the second shot to take up to 26 shots.
- When you have finished taking shots, proceed to Step 4.

### Finish shooting.

Press the ( button.

### Merge the images on a computer.

 For details on how to merge the images, refer to the Software Starter Guide.



600



This function is not available when a TV is used as the monitor (p. 76).

# Using Various Functions for Shooting Movies

This chapter provides more advanced information than the

"

Shooting Movies" and "

Viewing Movies" sections of Chapter 1.



This chapter assumes that the mode switch is set to \mathbb{\mathbb{T}}.

# **Changing the Movie Mode**

You can select between three movie modes.



### Select a movie mode.

After pressing the ⊕ button, press the
 ▲▼ buttons to select ➡.

### Select an option.

- Press the ◆ buttons to select an option, then press the ( button.
- The setting will display on the screen.

Standard	For shooting standard quality movies.
况 Color Accent	These shooting modes let you change all colors except the selected color to black and white, or exchange the selected color
∕s Color Swap	for another color, when shooting. See "Changing the Color and Shooting" (p. 89) for details.



Under some conditions, colors may not turn out as expected in the  $\overline{\mathbb{Z}}$  and  $\overline{\mathbb{Z}}$  mode.

# **Changing the Image Quality**

You can select between three image quality settings.



# Select the image quality.

After pressing the ( button, press the buttons to select ( button).

### Select an option.

- Press the ◀▶ buttons to select an option, and press the ( str) button.
- The setting will display on the screen.

### **Image Quality Table**

mage Quanty Table	
Image Quality (Recording Pixels/Frame Rate)	Content
1280 × 720 pixels, 30 frames/sec.	For shooting high-definition movies.
640 × 480 pixels, 30 frames/sec.	For shooting standard quality movies.
320 × 240 pixels, 30 frames/sec.	Since the number of the recording pixels is smaller, the image quality will be lower than with [100], but you can record three times the length.

### **Estimated Shooting Time**

Image Quality	Shooting Time		
(Frame Rate)	2 GB	8 GB	
1280	10 min. 53 sec.	43 min. 32 sec.	
640	23 min. 49 sec.	1 hr. 35 min. 11 sec.	
320	1 hr. 13 min. 10 sec.	4 hrs. 52 min. 24 sec.	

Based on Canon's testing standards.

Recording will automatically stop when either the clip file size reaches 4 GB or the recording time reaches approximately 29 minutes and 59 seconds in  $\boxed{m}$ , 1 hour in  $\boxed{m}$  and  $\boxed{m}$ .

Recording may stop even if the maximum clip length has not been reached on some memory cards. SD Speed Class 4 or higher memory cards are recommended.

# **AE Lock/Exposure Shift**

You can set the exposure or change it in 1/3 steps within a range of ±2.



#### Focus.

Press the shutter button halfway to focus.



- Press the button to lock the exposure. The exposure shift bar appears.
- Press the button again to release the lock.

### Change the exposure.

- While watching the screen, press the buttons to adjust the brightness.
- ✓ Shoot.

# **Other Shooting Functions**

The following functions can be used in the same way as for still images. For R and R modes, the functions with an \* attached can be used in the same way as for still images.

- Zooming in More Closely on Subjects (Digital Zoom) (p. 60)
  - You can use the digital zoom, but the optical zoom cannot be used. If you want to shoot at the maximum zoom factor, you should adjust the optical zoom to the maximum before shooting.

The sound of the zoom will be recorded.

- ঐ Using the Self-Timer (p. 63)\*
- Shooting Close-ups (Macro) (p. 67)\*
- A Shooting Far Away Subjects (Infinity) (p. 67)\*
- Adjusting the White Balance (p. 73)
- Changing the Tone of an Image (My Colors) (p. 74)
- Shooting Using the Two Second Self-Timer (p. 75)\*
- Shooting Using a TV Monitor (p. 76)\*
- AFL Shooting with the AF Lock (p. 82)
- Turning off the AF Assist Beam (p. 136)\*
- Displaying the Overlay (p. 137)\*
   [3:2 Guide] is not available.
- Changing the IS Mode Settings (p. 138)\*
   You can switch between [Continuous] and [Off].

# **Playback Functions**

The following functions can be used in the same way as for still images.

- M Erasing Images (p. 28)
- Searching Images (Index Display) (p. 102)
- 숩 Viewing Images in Filtered Playback (p. 103)
- 🗣 Viewing Slideshows (p. 105)
- Changing Image Transitions (p. 109)
- Viewing Images on a TV (p. 110)
- M Erasing All Images (p. 112)
- **О** Protecting Images (p. 116)
- Organizing Images by Category (My Category) (p. 118)

## Summary for " Viewing Movies" (p. 33)

•	Exit	
<b>•</b>	Playback	
<b> </b>	Slow Motion Playback (you can use the ◀▶ buttons to adjust the speed Sound will not play back.)	
K	Display the first frame	
- ■	Previous frame (Rewind if you hold down the 💮 button.)	
<b>I</b>	Next frame (Fast forward if you hold down the ( button.)	
H	Display the last frame	
×	Edit (p. 98)	
В	Displays when connected to a PictBridge compliant printer (p. 29). Refer to the <i>Personal Printing Guide</i> for details.	

# **★ Editing**

You can trim the beginnings and ends of recorded movies in one-second increments.







Movie Editing Bar

# ¶ Select **%**.

- ► The movie editing panel and the movie editing bar will display.

## Set the editing range.

- Press the ▲▼ buttons and select %♥ or ♥♥.
- Press the ◀▶ buttons to move ■. ¾ will display at each one-second interval. If you select ⅙ৢ , you can trim the beginning of the movie from ¾ . If you select ¬⅙ , you can trim the end of the movie from ¾ .
- The section selected with 
   will be the section of the movie that remains after editing.

### Check the edited movie.

- Press the ▲▼ buttons to select ▶, then press the ★ button. The edited movie will play.
- To edit the movie again, repeat Step 2.
- To cancel editing, press the ▲▼ buttons, and select '5'. After pressing the (\*\*) button, press the ◀▶ buttons to select [OK], and press the (\*\*) button.




### Save the edited movie.

- Press the ▲▼ buttons to select ♠, then press the ♠ button.
- Press the ◀▶ buttons to select [New File], then press the ∰ button.
- The movie will be saved as a new file.



- When [Overwrite] in Step 4 is selected, the unedited movie is overwritten with the edited movie, erasing the original movie.
- When there is not enough space left on the memory card, only [Overwrite] can be selected.
- If the battery is depleted partway through editing, the edited movie clips may not be saved. When editing movies, you should use a fully charged battery or the separately sold AC adapter kit (p. 40).

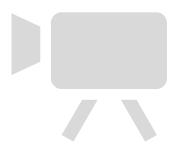

# Using Playback and Other Functions

The first part of this chapter explains various ways to play back and edit images. The latter part explains how to specify images for printing.


 Press the button to select the Playback mode before operating the camera



- It may not be possible to play back or edit images that have been edited on a computer, had their file name changed, or have been taken on a different camera.
- The edit function (pp. 120 125) cannot be used if the memory card does not have free space available.

# Searching Images (Index Display)

Displaying multiple images at a time lets you quickly find the image you want.







# Move the zoom lever toward ...

- Images will display in an index. The selected image will have a green frame and be enlarged.
- Move the zoom lever toward to increase the number of images. The number of images increases each time you move the lever.
- Move the zoom lever toward Q to reduce the number of images. The number of images will reduce each time you move the lever.

# Change the displayed images.

- If you move the zoom lever toward again with the maximum number of images displayed on the screen, all images will display inside a green frame.
- Press the ◀▶ buttons to switch images by the displayed unit.
- Move the zoom lever toward Q to return to Index Display.

## Select an image.

- Press the ▲▼◀▶ buttons in Index Display to select images.
- Press the button to display the selected image by itself.

# C Viewing Images in Filtered Playback

When there are many images on the memory card, you can filter and display them by a specified condition. You can also delete (p. 112) or protect (p. 116) all images at once in the filtered condition.

### **Setting the Conditions**



- In Single Image Playback, press the button.
- Press the ▲▼ buttons and select a jump method.
- If you press the DISP, button, you can switch Information Display on or off.

Jump Shot Date	Displays the images shot on the specified date.
Jump to My Category	Displays the images of the specified category (p. 118).
Jump to Folder	Displays the images in a specified folder.
Jump to Movie	Jumps to a movie.
Jump 10 Images	Jumps over 10 images at a time.
Jump 100 Images	Jumps over 100 images at a time.

# Search by 🄞, 🚳, 🖆 and 📻



Target Filters

### Select a target filter.

- Use the buttons to select a filter (excluding ( ).
- Pressing the MENU button restores the single image display.

#### C Viewing Images in Filtered Playback



# Viewing images using filter playback.

- If you press the (⊕) button, filter playback will start. o and a blue frame will appear.
- If you press the ◀▶ buttons, the target images selected in Step 1 will display.
- If you press the button, it will cancel filter playback.

### Jump by 📆 and 🛍 Images



- If you press the ◀▶ buttons, the display will advance to the image that is the selected number of images away.
- Pressing the MENU button restores the single image display.



### What if you can't select a target?

When you select **(** in Step 1 on p. 103, you can only select **(** in there are no images sorted into categories. Also, you can only select 1 target when there are only images with the same date in **(** and only 1 folder has been created has been created in **(** and only 1 folder has been created has

# 6

### Filter playback


In filter playback (Step 2), you can view filtered images with "Searching Images (Index Display)" (p. 102), "
Viewing Slideshows" (p. 105), and "Q Magnifying Images" (p. 109). However, if you change the category (p. 118), or edit an image and save it as a new image (p. 121), [Display All Images] will display, and filter playback will cancel.

# **Viewing Slideshows**

You can automatically play back images recorded to a memory card. Each image displays for approximately 3 seconds.







Press the MENU button and select the tab, then select [Slideshow] and press the button.

### Select [Start].

- Press the ▲▼ buttons to select [Start], then press the button.
- A few seconds after "Loading image..." displays, the slideshow will start.
- You can pause/restart a slideshow by pressing the ( button again.
- Press the MENU button to stop the slideshow




- If you press the ◀▶ buttons during playback, the image will switch. If you
  press and hold down the ◀▶ buttons you can fast-forward through
  images.
- The power saving function does not work during slideshows (p. 53).

### **Changing Settings**

You can change the time that slideshow images are displayed, transition effects and set the slideshow to repeat. You can select from seven transition effects when switching between images. You can also select which images to play back.





Press the MENU button and select the tab, then select [Slideshow] and press the button.

# Make the setting.

Press the ▲▼ buttons and select an item, then press the ◀▶ buttons and adjust the setting.

### Playback Filter

All Images	Plays back all images.
Date	Plays back images from a specified shooting date (p. 107).
My Category	Plays back images from a specified category (pp. 107, 118).
Folder	Plays back images from a specified folder (p. 107).
Movies	Plays back movies only.
Stills	Plays back still images only.

### Select Images for Playback by Type

You can select which images to play back within the playback filters: Date, My Category, and Folder.




- Select the playback filter option and press button.
  - The playback filter selection screen will display.
- Press the ▲▼ buttons to select a playback filter, then press ( button.
  - ▶ Once set, ✓ will appear.
  - Press (st) button once more to cancel selection.
  - You can display the images within the option by pressing the ◀▶ buttons.
  - Images will play back in the order they were selected.
- Press the MENU button.
  - ➤ The selected options will be set, and the slideshow screen will reappear.

# **Checking the Focus**

You can magnify the area of a recorded image that was inside the AF frame or the area of a face that was detected to check the focus.





- A white frame will appear where the AF frame or face was when the focus was set.
- A gray frame will appear on a face detected during playback.
- The area within the orange frame appears magnified.



### Switch frames.


Pressing the () button will switch to a different frame.



# Change the magnification level or location.

- Move the zoom lever toward Q once.
- Use the zoom lever to change the display size, and the ▲▼◀▶ buttons to change the display position while checking the focus.
- Pressing the MENU button resets the display to Step 1.

## **Q** Magnifying Images





Approximate Location of Displayed Area

#### Move the zoom lever toward $\mathbb{Q}$ .

- The display will zoom in on the image and SIND will appear, if you continue to hold the zoom lever, it will continue to zoom in up to a factor of 10x.
- If you press the buttons, you can move the location of the displayed area.
- Move the zoom lever toward to zoom out or return to Single Image Playback.
- When San 3- appears on the screen, press the ∰ button to switch to Sand .

  Press the ♠ buttons to switch between images at the same level of magnification.

  Press the ∰ button again to return to normal.

## Changing Image Transitions

You can select from four transition effects when switching between images in single image playback.



#### Select [Transition].

- Press the MENU button and select the tab, then select [Transition] and use the
  - **♦** buttons to select a transition effect.
- Press the MENU button to accept the setting.


## Viewing Images on a TV

Using the supplied AV cable, you can connect the camera to a TV to view images you have shot.

## Items to Prepare

- Camera and TV
- AV cable supplied with the camera (p. 2)







#### Turn off the camera and TV.

#### Connect the camera to the TV.

- Open the camera's terminal cover and fully insert the plug of the supplied AV cable into the camera's A/V OUT terminal.
- Insert the cable plug fully into the video input terminals as shown in the illustration.
- Turn on the TV and switch it to the input to which the cable is connected.

#### Turn on the camera.

- Press the button to turn on the camera.
- The image will appear on the TV (nothing will appear on the monitor of the camera).
- After you finish viewing, turn off the camera and TV, and unplug the AV cable.





#### What if the images don't properly display on the TV?

Images will not display correctly if the camera's video output setting (NTSC/PAL) does not match the TV system. Press the **MENU** button, select the **f** tab and [Video System] to switch to the correct video system.

## Viewing Images on a High-Definition TV

Use the separately sold HDMI cable HTC-100 to connect the camera with a high-definition TV for enhanced viewing experience.





## ◀ Turn off the camera and TV.

#### Connect the camera to the TV.

- Open the camera's terminal cover and fully insert the plug of the supplied AV cable into the camera's HDMI out mini terminal.
- Insert the cable plug fully into the TV's HDMI terminal as shown in the illustration.
- Follow Steps 3 4 on p. 110 to display the images.



The supplied AV cable and the separately sold HDMI cable HTC-100 cannot be plugged into the camera simultaneously. This could cause the camera to malfunction.



## **Erasing All Images**

You can select images and erase them in groups. Since erased images cannot be recovered, exercise adequate caution before erasing. Protected images (p. 116) cannot be erased.





## Select [Erase].

■ Press the MENU button, select the ► tab and [Erase], and press the ( button.



#### Select a selection method.

- Press the ▲▼ buttons, select a selection method, and press the ( button.
- Press the MFNU button to return to the menu screen.

## **Selecting Images Individually**



## Select [Select].

Follow Step 2 above to select [Select] and press the (SE) button.

## Select images.

- Press the ◆▶ buttons, select the image and press the (st) button.
- Once set, will appear on the screen.
- Pressing the (SET) button once more will cancel the selection, and disappear.
- To select multiple images, repeat the above operation.



#### Press the MENU button.

#### Erase.

Press the ◀▶ buttons, select [OK] and press the ( button.

#### **Select Range**



Follow Step 2 on p. 112 to select [Select Range] and press the button.

## Select the starting image.

- Press the (st) button.
- Press the buttons, select the image and press the button.








## Select the ending image.

- Press the ▶ button, select [Last image] and press the ( button.
- You cannot select images before the first image.
- Press the ◀▶ buttons to select an image, and press the ( button.

## Erasing All Images





#### Erase.

Press the ▼ button to select [Erase], then press the ⊕ button.

## **Select All Images**



## Select [All Images].

Follow Step 2 on p. 112 to select [All Images] and press the button.



#### Erase.

Press the buttons, select [OK] and press the button.



## **Select by Category**





## Select [Select by Date], [Select by Category] or [Select by Folder].

Follow Step 2 on p. 112 to select a category and press the ( button.

#### Select a menu item.

- Press the ▲▼ buttons, select the items to set and press the ( button.
- If you press the buttons, you can display the images within the category.
- Once set, will appear on the screen.
- Pressing the (str) button again deselects the category and √ disappears.

#### Press the MENU button.

### ✓ Erase.

Press the ♠ buttons select [OK] and press the ( str) button.


## What if you cannot select [Select by Category]?

If there are no images that have been sorted into categories (p. 118), you will not be able to select [Select by Category] in Step 1.

## O¬¬ Protecting Images

You can protect important images so that they cannot be erased by the camera (pp. 28, 112).





Press the MENU button and select the tab, then select [Protect] and press the button.



#### Select a selection method.

- Press the ▲▼ buttons to select a selection method, and press the ⊕ button.
- Press the MENU button to return to the menu screen.



If you format the memory card (pp. 22, 52), protected images will also be erased.



Protected images cannot be erased with the camera's erase function. To erase an image, cancel protection first.

## **Selecting Images Individually**



#### Select [Select].

- Follow Step 2 above to select [Select], and press the ( button.
- Follow Step 2 on p. 112 to select an image.
- Pressing the (st) button again deselects the image and (sq) will disappear.
- To select multiple images, repeat the above operation.

## **Select Range**



## Select [Select Range].

- Follow Step 2 on p. 116 to select [Select Range] and press the button.
- Follow Steps 2 and 3 on p. 113 to select images.

## Protect images.

Press the ▼ button, select [Protect] and press the ( button.

## Select All Images



## Select [All Images].

Follow Step 2 on p. 116 to select [All Images] and press the (set) button.

## Protect images.

Press the ▲▼ buttons, select [Protect] and press the ( button.

### Select by Category



## Select [Select by Date], [Select by Category] or [Select by Folder].

- Follow Step 2 on p. 116 to select the type and press the ( button.
- Follow Steps 2 and 3 on p. 115 to select images.

## Protect images.

Press the ▲▼ buttons, select [Protect] and press the ( button.



You can unlock groups of protected images if you select [Unlock] in Step 2, while in [Select Range], [All Images] or [Select by Category].

## Organizing Images by Category (My Category)


You can categorize images. You can also use the categorized images in the following functions.

 Jump Display (p. 103), Slideshow (p. 105), Erase All (p. 112), Protect (p. 116), Print Settings (DPOF) (p. 126)



## Select [My Category].

Press the MENU button and select the tab, then select [My Category] and press the button.



## Make the setting.

- Press the ▲▼ buttons, select a category and press the ( button.
- Press the MENU button to return to the menu screen.



Images are automatically categorized by shooting condition as they are shot

⑤ : Images shot in ⑥, ☒, Ѯ₀ modes or images with faces detected when the [AF Frame] is set to [Face AiAF] will be categorized to ⑤₀.

#### Selecting Images Individually



#### Select [Select].

- Follow Step 2 on p. 118 to select [Select] and press the button.
- Follow Step 2 on p. 112 to select images.
- Press the ▲▼ buttons, select a category and press the ( button.
- Once set, 

  ✓ will appear on the screen.
- Pressing the ⊕ button again deselects the category and ✓ disappears.
- To select multiple images, repeat the above operation.

## Select Range



## Select [Select Range].

- Follow Step 2 on p. 118 to select [Select Range] and press the ( button.
- Follow Steps 2 and 3 on p. 113 to select images.
- Press the ▼ button to select an item, then press the ♠ buttons, and select a type.

## Select the setting.

Press the ▼ button to select [Select] and press the ∰ button.



If you select [Deselect] in Step 2, you can deselect all of the images in the [Select Range] category.

## Rotating Images

You can change the orientation of an image and save it. Movies with a resolution of  $\overline{\mathbb{M}}$  cannot be rotated.





## Select [Rotate].

Press the MENU button and select the Lab, then select [Rotate] and press the Button.



## Rotate the image.

- Press the buttons to select an image to rotate.
  - The image will rotate 90° with each press of the ( button.
  - Pressing the MENU button will restore the menu screen.

## **⊞** Resizing Images


You can resize images to a lower pixel setting and save the resized image as a separate file.




Resize

## Select [Resize].

Press the MENU button and select the tab, then select [Resize] and press the button.



Press the ◀▶ buttons to select the image and press the ( button.



- Press the ◀▶ buttons to select an option, then press the ( button.
- The [Save new image?] screen will appear.



## Save the new image.

- Press the ♠ buttons to select [OK] and press the ( button.
- The image will be saved as a new file.



#### Display the new image.

When you press the MENU button, the [Display new image?] screen will appear. If you press the ◀▶ buttons to select [Yes] and press the ∰ button, the saved image will display.



- You cannot resize an image to a larger size.
- ullet You cannot resize images taken with the  ${f M}$  and  ${f XS}$  settings.

## **4** Trimming

You can cut out a portion of a recorded image and save it as a new image file.



#### Trimming Area



Trimming Area Display

Recorded pixels after trimming



## Select [Trimming].

Press the MENU button, select the 

tab and [Trimming], then press the (

sir) button.

## Select an image.

Press the ♠ buttons to select the image and press the ( button.

## Adjust the trimming area.

- A green frame will appear around the portion of the image to be trimmed.
- The original image will display in the upper left and the trimmed image will display in the lower right.
- If you move the zoom lever to the left or right, you can change the frame size.
- If you press the ▲▼◀▶ buttons, you can move the frame.
- If you press the DISP, button, you can change the vertical/horizontal orientation of the frame.
- In an image with a detected face, a gray frame will appear around faces located in the upper left of the frame, and the frame can be used for trimming. You can switch between frames by pressing the button.
- Press the MENU button.

## Save as a new image and display.

Perform Steps 4 and 5 on p. 121.



- ■, S and XS images cannot be trimmed.
- Trimming is only possible for images shot at aspect ratio 4:3 (vertical 3:4).
- The number of recorded pixels in a trimmed image will be smaller than before trimming.

# Adding Effects with the My Colors Function

You can change the color of an image and save it as a separate image. Refer to p. 74 for details on each menu item.





#### Select [My Colors].

● Press the **MENU** button, select the **t**ab and [My Colors], and press the ( button.

## Select an image.

● Press the ◆ buttons to select the image and press the ( button.

## Select a menu option.

- Press the ♠ buttons to select an option, then press the ⊕ button.
- After selecting the menu option, you can zoom the image by following the operations in "Q Magnifying Images" (p. 109).
- If you press the button during magnified display, you can switch to the original image. Pressing the MENU button restores the menu screen.

## Save as a new image and display.

Perform Steps 4 and 5 on p. 121.



- If you repeatedly change the color of an image, the quality will gradually deteriorate and you may not achieve the expected color.
- The coloration of images changed with this function may vary from those recorded with the My Colors function (p. 74).

# **Ci** Making Dark Subjects Appear Brighter (i-Contrast)

Detects and compensates for dark sections of subjects or people's faces and saves the image as a separate file. You can select 4 levels of correction: [Auto], [Low], [Medium] or [High].





## Select [i-Contrast].

- Press the MENU button, select the ▶ tab and [i-Contrast], then press the ( button.
- Select an image.
  - Press the ◆ buttons to select the image and press the ( button.
- Select an option.
  - Press the ◀▶ buttons to select an option, then press the ( button.
- Save as a new image and display.
  - Perform Steps 4 and 5 on p. 121.
- What if the image wasn't corrected by the [Auto] option as well as you would like?

Select [Low], [Medium] or [High] and adjust the image.



- Under some conditions, the image may appear coarse or the exposure setting may not be suitable.
- Repeatedly adjusting the same image may cause the quality to deteriorate.

## Correcting the Red-Eye Effect

You can automatically correct red eyes in images and save them as new files.





## Select [Red-Eye Correction].

- Press the MENU button, select the Lab and [Red-Eye Correction], then press the
   button.
- ▶ The [Red-Eye Correction] screen will appear.
- Select an image.
  - Press the buttons, select the image.
- Correct the image.
  - When you press the button, red-eye detected by the camera will be corrected and a frame will appear around the corrected portion.
  - You can zoom the image using the procedures in "Q Magnifying Images" (p. 109).
- Save as a new image and display.
  - Press the ▲▼◀▶ buttons to select [New File], and press the ( st) button.
  - The image will be saved as a new file.
  - Perform Step 5 on p. 121.



- Some images may not be properly corrected.
- When [Overwrite] in Step 4 is selected, the uncorrected image is overwritten with the corrected data, erasing the original image.
- Protected images cannot be overwritten.

## **Selecting Images for Printing (DPOF)**

You can select certain images on a memory card for printing (up to 998 images) and specify the number of print copies so they can be printed together or processed at a photo developer service. You can then print all the selected images at once or take the memory card to a photo developer to order prints. These selection methods comply with the DPOF (Digital Print Order Format) standards.

## **Print Settings**

You can set the print type, date and file number. These settings apply to all images selected for printing.



## Select [Print Settings].

Press the MENU button and select the Lab, then select [Print Settings] and press the button.

## Adjust the settings.

- Press the ▲▼ buttons to select a menu item, then press the ◀▶ buttons to select an option.
- Pressing the MENU button accepts the settings and restores the menu screen.

Print Type	Standard	Prints one image per page.
	Index	Prints several reduced size images per page.
	Both	Prints both standard and index formats.
Date	On	Prints the date from the shooting information.
	Off	-
File No.	On	Prints the file number.
	Off	_
Clear DPOF data	On	Removes all print settings after printing.
	Off	_



- Some printers or photo developer services may not be able to reflect all
  of the print settings in the output.
- may display when using a memory card with print settings set by a different camera. These settings will be overwritten by those set by your camera.
- Images with the date embedded always print with the date, regardless of the [Date] setting. As a result, some printers may print the date twice on these images if [Date] is also set to [On].



- With [Index] selected, the [Date] and [File No.] options cannot be set to [On] at the same time.
- The date will be printed in the style set in the [Date/Time] function in the **ft** tab (p. 19).

## **Selecting the Number of Copies**



## Select [Select Images & Qty.].

Press the MENU button and select the tab, then select [Select Images & Qty.] and press the button.

## Select an image.

- Press the ◀▶ buttons to select an image, then press the ( button.
- You will be able to set the number of print copies.
- If you select [Index], 
   ✓ appears on the screen.
- Press the button again to deselect the images. will disappear.

#### Selecting Images for Printing (DPOF)



## Set the number of prints.

- Press the ▲▼ buttons to set the number of prints (maximum 99).
- Repeat Steps 2 and 3 to select other images and the number of prints for each.
- You cannot set the number of print copies for Index prints. You can only select which images to print in Step 2.
- Pressing the MENU button accepts the settings and restores the menu screen.

## Select Range



## Select [Select Range].

- Select [Select Range] in Step 1 on p. 127 and press the ( button.
- Select images according to Steps 2 and 3 on p. 113.

## Make print settings.

Press the ▲▼ buttons, select [Order] and press the ( button.

## **Set All Images to Print Once**



## Select [Select All Images].

 Select [Select All Images] from the screen in Step 1 on p. 127 and press the button.

## Make print settings.

Press the ◀▶ buttons, select [OK] and press the ( button.

#### **Select by Category**




### Select [Select by Date], [Select by Category] or [Select by Folder].

- Follow Step 1 on p. 127 to select a type and press the ( st) button.
- Follow Steps 2 and 3 on p. 115 to select images.

## Make print settings.

Press the ◀▶ buttons, select [OK] and press the ( button.

#### **Clearing All Selections**



#### Select [Clear All Selections].

- Select [Clear All Selections] in Step 1 on p. 127, and press the () button.
- Press the ♠ buttons to select [OK], then press the ∰ button.
- All selections will be cleared.

## **Print Added Images**

The following examples use the Canon SELPHY series printers. Please also refer to the *Personal Printing Guide*.



Connect the camera to the printer (p. 29).

#### Print.

- Press the ▲▼ buttons, select [Print now] and press the ( button.
- Printing will start.
- If you stop the printer during printing and start again, it will start from the next print.



## **Customizing the Camera**

You can customize various functions to suit your shooting preferences. The first part of this chapter explains convenient and commonly used functions. The latter part explains how to change shooting and playback settings to suit your purposes.



## **Changing Functions**

You can customize convenient and commonly used functions from the **ft** tab (p. 48).

#### Turning off the Power Saving Function

You can set the power saving function (p. 53) to [Off]. Setting it to [On] is recommended to save battery power.



- Select [Power Saving], then press the ()
   button.
- Press the ▲▼ buttons to select [Auto Power Down], then use the ◀▶ buttons to select [Off].
- If you set the Power Saving function to [Off], be careful not to forget to turn off the camera after use.

## **Setting the Screen Shut-Off Time**

You can adjust the time the screen takes to shut off automatically (p. 53). This also works when [Auto Power Down] is set to [Off].



- Select [Power Saving], then press the button.
- Press the ▲▼ buttons to select [Display Off], then use the ◀▶ buttons to select a time.
- In order to save battery power, it is recommended to select less than [1 min.].


## **Using the World Clock**

When traveling abroad, you can record images with local dates and times simply by switching the time zone setting if you pre-register the destination time zones. You can enjoy the convenience of not having to switch the Date/Time settings.









#### Set the home time zone.

- Select [Time Zone] and press the button.
- When setting this for the first time, confirm the information that displays on the screen at the left, and press the () button.
- Press the ◆ buttons to select the home time zone, then press the ∰ button. To set daylight saving time (adds 1 hour), press the ▲▼ buttons to select ※.

#### Set the world time zone.

- Press the ▲▼ buttons to select ⋨, then press the (♣) button.
- Press the ◀▶ buttons to select the destination time zone, then press the button.
- You can also set the daylight saving time as in Step 1.

#### Select the world time zone.

- Press the ▲▼ buttons and select [Home/ World].
- Press the ◀▶ buttons to select ズ, then press the MENU button.
- ➤ ★ will appear in the [Time Zone] or shooting screen (p. 44).



If you change the date or time in the X setting (p. 19), your ft time and date will automatically change.

## **Changing the File Number Assignment**

Images you shoot are automatically assigned file numbers in the order they were taken, from 0001 – 9999, and saved to folders of up to 2,000 images. You can change the file number assignment.



 Select [File Numbering], then press the buttons to select an option.

Continuous	Even if you shoot using a new memory card, the file numbers are assigned consecutively until an image with the number 9999 is taken/saved.
Auto Reset	If you replace the memory card with a new one, file numbering begins with 0001 again.



- If you use a memory card already containing images, the newly assigned file numbers may continue the existing numbering for both the [Continuous] and [Auto Reset] settings. If you want to start over with file number 0001, format the memory card before use (p. 22).
- Refer to the Software Starter Guide for information regarding folder structure or image types.

#### **Creating a Folder**

You can create new folders in which to save images.



- Select [Create Folder], then press the button.
- Select [Create New Folder], then press the ◀▶ buttons to select √.
- C\* will display on the screen (p. 44) when shooting, and shots will be recorded into a new folder.

#### **Creating Folders by Day and Time**

You can set a day and time for folder creation.



- Select [Create Folder], then press the the button.
- Select [Auto Create], then press the buttons to select an interval.
- Select [Time], then press the buttons to set a time.
- The new folder will be created on the set day and time. Images shot after the creation date are saved to the new folder.

## **Turning off Auto Rotate**

When you play back images on the camera, images shot in vertical orientation automatically rotate and display vertically. You can turn off this function.



 Select [Auto Rotate], then press the buttons to select [Off].

### **Changing the Lens Retract Time**

For safety reasons, the lens retracts about 1 minute after pressing the button when in a shooting mode (p. 27). You can set the retraction time to [0 sec.].



 Select [Lens Retract], then press the buttons to select [0 sec.].

## **Changing Shooting Functions**

If you set the mode switch to  $\square$ , and the mode to  $\square$ , you can change the settings in the  $\square$  tab (p. 48).



Before attempting to shoot using a function explained in this chapter in modes other than **P** mode, check if the function is available in those modes (pp. 148 – 151).

#### **Turning off the AF Assist Beam**


The lamp will automatically light to assist focusing in low light conditions when you press the shutter button halfway. You can turn off the lamp.



Select [AF-assist Beam], then press the
 buttons to select [Off].

#### **Turning off the Red-Eye Reduction Function**

The red-eye reduction lamp lights in order to reduce the red-eye effect that occurs when shooting in dark conditions with the flash. You can turn off this function



- Select [Flash Settings], then press the (st) button.
- Press the ▲▼ buttons to select [Red-Eye Lamp], then press the ◀▶ buttons to select [Off].

#### **Changing the Image Display Right After Shooting**

You can change the image display that appears after shooting.



■ Select [Review Info], then press the ↓
buttons to select an option.

Detailed Displays detailed information (p. 45).

The area inside the AF frame is magnified, allowing you to check the focus. The procedure is the same as

in "Checking the Focus" (p. 108).

## **Displaying the Overlay**

You can display gridlines for vertical and horizontal guidance, or a 3:2 guide to confirm the printable area for L size or postcard size prints.



● Select [Disp. Overlay], then press the ◀▶
buttons to select an option.

Grid Lines A grid overlays the display.

The areas outside the 3:2 range are grayed out. This area will not print when printing on paper with a 3:2 aspect ratio.

Both grid lines, and the 3:2 guide will display.



- In W mode, you cannot set [3:2 Guide] or [Both].
- · Grid Lines will not be recorded on the image.
- The gray areas displayed with [3:2 Guide] are the areas that will not be printed. The actual image recorded will include the portion in the gray areas

## **Changing the IS Mode Settings**



Select [IS Mode], then press the buttons to select an option.

Continuous	Image stabilization is always on. You can confirm the result directly on the display, which makes it easier to check the composition or focus.
Shoot Only	Image stabilization is only active at the moment of shooting.
Panning	Image stabilization only counters up and down motion. This option is recommended for shooting objects moving horizontally.




- If camera shake is too strong, attach the camera to a tripod. It is recommended to set the IS Mode to [Off] when the camera is fixed to a tripod.
- When using [Panning], hold the camera horizontally. Image stabilization does not work when the camera is held vertically.

## **Changing Playback Functions**

You can adjust the settings in the **\bigsize** tab by pressing the **\bigsize** button (p. 48).

## Selecting the Image that First Displays in Playback



Select [Resume], then press the ◀▶ buttons to select an option.

to select an option.		
Last seen	Resumes with the image last viewed.	
Last shot	Resumes with the most recently shot image.	

## **Changing the Start-up Image or Sound**

In the **f†** tab, you can set one of your recorded images as the start-up image when the camera power is turned on, or change the sounds played for each camera operation with your recorded sounds.

#### **Change Sounds**



- Select [Sound Options], then press the whiten
- Press the ▲▼ buttons to select an option.
- Press the ◆▶ buttons to change the sound.
  - Preset sound.
  - You can register your sounds using the supplied software (ZoomBrowser EX/ ImageBrowser) (p. 140).


#### **Changing the Start-up Screen**



- Select [Start-up Image], then press the button.
- Press the buttons to change the image.
  - X No start-up image.
  - 1 Preset image.
  - You can register images that you have taken.

## Register the Start-up Screen





Press the buttons to select [2], then press the button.



- Press the ◀▶ buttons to select an image, then press the ( button.
- Press the buttons to select [OK], then press the button to complete registration.



#### Register images or sounds saved on a computer

You can register images or sounds to the camera using the included software (ZoomBrowser EX / ImageBrowser). Refer to the *Software Starter Guide* for details.



Any previously registered start-up image will be overwritten when registering a new start-up image.

## **Useful Information**

This chapter introduces how to use the AC adapter kit (sold separately), troubleshooting tips and contains lists of functions. The index also appears at the end.



## **Using Household Power**

If you use AC Adapter Kit ACK-DC10 (sold separately), you can use the camera without worrying about how much charge is left in the battery.








## Insert the coupler.

- Open the cover (p. 16) and insert the coupler as shown until it locks into place with a click.
- Close the cover (p. 16).



## Plug the cord into the coupler.

Open the cover and fully insert the plug into the coupler.





- Connect the power cord to the compact power adapter, then plug the other end into a power outlet.
- You can turn the camera on to use it.
- After you finish, turn off the camera and unplug the power cord from the power outlet



Do not unplug the plug or power cord with the camera turned on. This could erase images you have taken or damage the camera.

## **Troubleshooting**

If you think there is a problem with the camera, first check the following. If the items below do not solve your problem, contact a Canon Customer Support Help Desk as listed on the included customer support list.

#### **Power**

#### You pressed the ON/OFF button, but nothing happened.

- Confirm that the battery is properly inserted (p. 16).
- Confirm that the memory card/battery cover is securely closed (p. 17).
- If the battery terminals are dirty, battery performance will decrease. Clean the terminals with a cotton swab and re-insert the battery several times.

#### Battery is consumed quickly.

 Battery performance decreases at low temperatures. Warm the battery by such methods as placing them in your pocket with the terminal cover on.

#### Lens will not retract.

 Do not open the memory card/battery cover while the power is on. After closing the memory card/battery cover, turn the power on then back off (p. 17).

#### TV output

Image is distorted or not showing on TV (p. 110).

#### **Shooting**

#### Cannot shoot.

• When in playback (p. 27), press the shutter button halfway (p. 23).

#### Camera screen is black at start-up.

 Images that have been edited on a computer, have had their name changed, or that have been taken with another camera may not display correctly when set as a start-up screen.

#### The screen is off.

Press the DISP, button (p. 44).

Screen does not display properly in dark places (p. 46).

#### Screen does not display properly while shooting.

Please note, the following will not be recorded in still images, but will be recorded in movies.

- When the camera is subjected to powerful light sources, the display may darken.
- Under fluorescent lighting, the screen may flicker.
- When shooting bright light sources, a bar of light (purplish red) may appear on the screen.

The screen turns off and you cannot shoot when you press the shutter button halfway (p. 26).

#### appears when the shutter button was pressed halfway (p. 59).

- Set the [IS mode] to [On] (p. 138).
- Set the flash to \$ (p. 66).
- Increase the ISO speed (p. 72).
- Attach the camera to a tripod.

## Image is blurred.

- Press the shutter button halfway to focus, then shoot (p. 23).
- Shoot the subject within the focusing distance (p. 155).
- Set the [AF-assist beam] to [On] (p. 136).
- Confirm that functions which you do not intend to use (macro, etc.) are not set.
- Shoot using the focus lock or AF lock (pp. 77, 82).

## Even when you press the shutter button halfway, the frame does not appear, and the camera does not focus.

 If you center on the light and dark contrasting area of the subject and press the shutter button halfway, or repeatedly press the shutter button halfway, the frame will appear and the camera will focus.

#### Subject is too dark.

- Set the flash to \$ (p. 66).
- Adjust the brightness with exposure compensation (p. 71).
- Adjust the brightness with the i-Contrast function (pp. 85, 124).
- Use the AE lock, or spot metering to shoot (p. 83).

Subject is too bright (overexposed).

- Set the flash to (2) (p. 59).
- Adjust the brightness with exposure compensation (p. 71).
- Use the AE lock, or spot metering to shoot (p. 83).
- The subject is too bright due to ambient lighting.

#### Image is dark even though the flash fired (p. 26).

- Increase the ISO speed (p. 72).
- Shoot within an appropriate distance for flash photography (p. 66).

#### Image taken using the flash is too bright (overexposed).

- Shoot within an appropriate distance for flash photography (p. 66).
- Set the flash to (2) (p. 59).

#### White dots appear on the image when shooting with the flash.

Light from the flash has reflected off dust particles or other objects in the air.

#### Image appears rough or grainy.

- Shoot with the ISO speed on a lower setting (p. 72).
- Depending on the shooting mode, when shooting in a high ISO speed the image may appear rough or grainy (p. 59).

### Eyes appear red (p. 86).

Set the [Red-Eye Lamp] to [On] (p. 137). When shooting with the flash, the lamp (on the front of the camera) lights (p. 42), and for approximately 1 second while the camera is reducing red-eye, it is not possible to shoot. It is more effective if the subject is looking directly at the lamp. Even better results can be obtained by increasing the lighting in indoor settings or approaching closer to the subject.

### The view in the viewfinder and the image taken may differ (p. 77).

• The differences will be larger when the subject is close to the lens.

# Recording images to the memory card takes a long time, or continuous shooting slows down.

• Perform a low level format of the memory card in the camera (p. 52).

# When you can't make settings for shooting functions or FUNC. menu.

 The items in which settings can be made differ depending on the shooting mode. Refer to "Functions Available in Each Shooting Mode" (p. 148).

### **Shooting movies**

#### Correct shooting time does not display, or stops.

 Format the memory card in the camera, or use a memory card capable of recording at high speeds. Even when the shooting time does not display properly, the video recorded will be the length that it was actually shot (p. 32).

# "!" displayed on the LCD monitor, and shooting ended automatically.

Camera's internal memory was insufficient. Try one of the following.

- Perform a low level format of the memory card in the camera (p. 52).
- Lower the recorded pixels (p. 95).
- Use a memory card capable of recording at high speeds.

### Zoom does not operate.

You can use the digital zoom while recording, but not the optical zoom (p. 96).

## **Playback**

#### Cannot play back images or movies.

 If the file name or folder structure is changed on a computer, you may not be able to play back images or movies. Refer to the Software Starter Guide for information regarding folder structure or file names.

#### Playback stops, or audio cuts out.

- Use a card that has been formatted on this camera (p. 22).
- If you copy a movie to a memory card that reads slowly, playback may interrupt momentarily.
- You may experience frame dropping and audio breakup when playing back a movie on a computer with insufficient system resources.

# **List of Messages that Appear on the Screen**

If error messages appear on the LCD monitor, try one of the following solutions.

### No memory card

 The memory card is not installed in the correct direction. Install the memory card in the correct direction (p. 16).

#### Card locked!

The SD memory card or SDHC memory card's write protect tab is set to "Lock".
 Unlock the write protect tab (p. 18).

#### Cannot record!

 You attempted to shoot an image without the a memory card, or with a memory card installed incorrectly. Install the memory card in the correct direction when shooting (p. 16).

### Memory card error (p. 52)

 Contact your Canon Customer Support Help Desk as there may be a problem with the camera.

#### Memory card full

There is not enough free space on the memory card to shoot (pp. 24, 55, 65, 79) or edit images (pp. 120 – 125). Erase the images (pp. 28, 112) to open space for new images, or insert an empty memory card (p. 16).

## Change the battery pack (p. 15)

#### No image.

There are no images recorded on the memory that can be displayed.

## Protected! (p. 116)

### Unidentified Image/Incompatible JPEG/Image too large./RAW

- Unsupported images or data, or corrupted image data cannot be displayed.
- Images manipulated on a computer, that have had their file name changed, or have been taken with a different camera may not display.

# Cannot magnify!/Cannot rotate/Cannot modify image/Cannot register this image!/Cannot modify/Cannot assign to category

- Incompatible images cannot be magnified (p. 109), rotated (p. 120), edited (pp. 120 125), registered to the start-up screen (p. 140), categorized (p. 118), or added to a print list (p. 126).
- Images manipulated on a computer, that have had their file name changed, or have been taken with a different camera may not be magnified, rotated, edited, registered to the start-up screen, categorized, or added to a print list.
- Movies cannot be magnified (p. 109), edited (pp. 120 125), or registered to the start-up screen (p. 140).

#### Cannot select!

- When selecting the selection range (pp. 113, 117, 119, 128), you tried to select
  a starting image that was after the last image or you tried to select an ending
  image that was before the starting image.
- You tried to select more than 501 images (pp. 113, 117, 119, 128).

#### Too many marks.

You selected more than 998 images to print settings. Select less than 998 images (p. 126).

#### Cannot complete!

 Print settings could not be saved correctly. Reduce the number of settings and try again (p. 126).

#### Naming error!

• The file name could not be created because there is an image with the same name as the folder that the camera is attempting to create, or the highest possible file number has already been reached (p. 134). In the 11 menu, change [File Numbering] to [Auto reset] (p. 134) or format the memory card (p. 22).

#### Communication error

 Images could not be transferred to the computer or printed due to the large amount of images (approx. 1000) stored on the memory card. Use a commercially available USB card reader to transfer the images. To print, insert the memory card into the printer's card slot to print.

#### Lens error, restart camera

- A lens error was detected. Press the ON/OFF button to turn the camera off and back on (p. 42). If this error message continues to display, contact your Canon Customer Support Help Desk as there may be a problem with the lens.
- This error can occur if you hold the lens while it is in motion or when using it in a location with excessive dust or sand in the air.

#### Exx (xx: number)

- A camera error was detected. Press the ON/OFF button to turn the camera off and back on (p. 42).
- If an error code displays directly after taking a picture, the shot may not have been recorded. Check image in playback mode.
- If this error code reappears, note the number and contact your Canon Customer Support Help Desk as there may be a problem with the camera.

# **Functions Available in Each Shooting Mode**

Function	Shooting modes	AUTO	_	-	PTE	•
Function		Р	Ą	BA	3	
	<b>\$</b> ^		0	0	*1	0
Flash (pp. 59, 66)	\$	_	0	0	*1	0
1 ld311 (pp. 33, 00)	<b>4<u>*</u></b>	_	0	_	_	_
	<b>3</b>	0	0	0	0	0
	All Range	0	_	_	_	_
Focusing Zone (p. 67)	A	_	0	0	0	0
Focusing Zone (p. 67)	*	_	0	0	0	_
	<b>A</b>	_	0	0	0	_
Exposure Compensation (p. 71)/Ex	posure Shift (p. 96)	_	0	0	0	0
	COFF	0	0	0	0	0
O. 15 There as (e.g. 00, 04, 75, 70)	G.	0	0	0	0	0
Self-Timer (pp. 63, 64, 75, 76)	GO C2	0	0	0	0	0
	€2 *2	0	0	0	0	0
AF Lock (p. 82)		_	0	_	_	_
AE Lock / FE Lock (pp. 83, 84, 96)			0	_	_	_
TV Display (p. 76)	0	0	0	0	0	
-17 W7	Information Display No Information Display		0	0	0	0
Information Display (p. 44)			0	0	0	0
, , , , , , , , , , , , , , , , , , ,	Display Off	0	0	0	0	0
		_	_	_	_	_
	FUNC. Menu					
ISO Speed (p. 72)	ISO AUTO	0	0	0	0	0
130 Speed (p. 72)	150 150 150 150 150 150 80 100 200 400 800 1600	_	0	_	_	_
White Balance (n. 72)	AWB	0	0	0	0	0
White Balance (p. 73)	<b>☀▲</b> ♣₩₩ <b>显</b>	_	0	_	_	_
Mr. Colore (n. 74)	OFF BY BN Be BW BP		_			
My Colors (p. 74)	AL AD AB AG AR AC	-	0	_	_	_
	(3)	0	0	0	0	0
Metering Mode (p. 83)	[][]	_	0	_	_	_
D: 11 ( 74)		0	0	0	0	0
Drive Mode (p. 71)	<u> </u>		0	0	0	0
Image Quality (Compression Ratio) (p. 69		0	0	0	0	0
	L M1M2M3 S W	0	0	0	0	0
Recording Pixels (pp. 69, 95)	1281 640 320	Ě	_	Ť	Ė	Ť

<sup>\*1 🗱</sup> when the flash fires.

### Functions Available in Each Shooting Mode

						C	)						Þ	<del></del>
×	<u>'</u>	爨	č*	50	(f)c		×	*8*	3200	ф	IA Is	₽₽	· <del></del>	iā is
0	*1	_	_	0	0	_	0	0	_	_	0	_	_	_
0	*1	_	*1	0	0	0	0	0	_	_	0	0	_	_
_	_	_	_	_	_	_	_	_	_	_	_	0	_	_
0	0	0	0	0	0	0	0	0	0	0	0	0	_	_
_	_	_	_	_	_	_	_	_	_	_	_	_	_	_
0	0	0	0	0	0	0	0	0	0	_	0	0	0	0
0	_	_	0	0	0	0	0	0	0	0	0	0	0	0
0	_	_	0	0	0	0	0	0	0	_	0	0	0	0
0	0	0	_	0	0	0	0	0	_	0	_	0	0	_
0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
0	0	_	0	0	0	0	0	0	0	0	_	_	_	_
0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0	0	0	0	_	_	_	_
_	_	_	0	_	_	_	_	_	_	0	_	_	0	_
_	_	_	_	_	_	_	_	_	_	0	_	_	_	_
0	0	0	0	0	0	0	0	0	0	0	0	_	0	0
0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0	0	0	0	_	_	0	_
0	0	0	0	0	0	0	0	0	0	0	_	_	0	_
						_	LINC	Men						
0	0	0		0	0	0	0	O	u	0	0	0	0	0
		_	0		_			_	*3	0			_	_
0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	_		0					_		0		0	0	_
_	_	_		_	_	_	_	_	_		_			_

0	0	0	_	0	0	0	0	0	*3	0	0	0	0	0
_	_	_	0	_	_	_	_	_	3	0	_	_	_	_
0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
_	_	_	0	_	_	_	_	_	_	0	_	0	0	_
_	_	_	0	_	_	_	_	_	_	0	_	0	0	_
0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
_	_	_	_	_	_	_	_	_	_	0	_	_	_	_
0	0	0	0	0	0	0	0	0	0	0	0	0	_	_
0	0	0	0	0	0	0	0	0	0	0	0	_	_	_
0	0	0	0	0	0	0	0	0	0	0	0	0	_	_
0	0	0	0	0	0	0	0	0	*4	*5	0	*5	_	_
_	_	_	0	_	_	_	_	_	_	_	_	_	0	0


O Selectable — Not selectable

# Menus

# Shooting Menu ■

	4THZA					
Function	AUTO	Р	Þ	PA.	2	
AF Frame (n. 90)	Face AiAF	0	0	0	0	0
AF Frame (p. 80)	Center	_	0	0	0	0
AF Frame Size (p. 80)	Normal/Small	_	0	_	_	_
Servo AF (p. 82)	On/Off	_	0	0	0	0
Digital Zoom (n. 60)	Standard/Off	0	0	0	0	0
Digital Zoom (p. 60)	1.5x / 2.0x	0	0	0	0	0
AF-Point Zoom (p. 81)	On/Off	0	0	0	0	0
AF-assist Beam (p. 136)	On/Off	0	0	0	0	0
Flash Settings	Red-Eye Corr. On/Off	0	0	0	0	0
(pp. 86, 137)	Red-Eye Lamp On/Off	0	0	0	0	0
i-Contrast (p. 85)	Off/Auto	*2	0	_	_	_
Review (p. 53)	Off/2 – 10 sec./Hold	0	0	0	0	0
Review Info (p. 137)	Off/Detailed/Focus Check	0	0	0	0	0
Blink Detection	On/Off	0	0	0	0	0
Dian Overlay (n. 127)	Off/Grid Lines	0	0	0	0	0
Disp. Overlay (p. 137)	3:2 Guide/Both	0	0	0	0	0
IC Made (n. 120)	Continuous/Off	*2	0	0	0	0
IS Mode (p. 138)	Shoot Only/Panning	_	0	0	0	0
Date Stamp (p. 62)	Off/Date/Date & Time	0	0	0	0	0

<sup>\*1</sup> AiAF \*2 Always [On]. \*3 Available when \$ is selected.

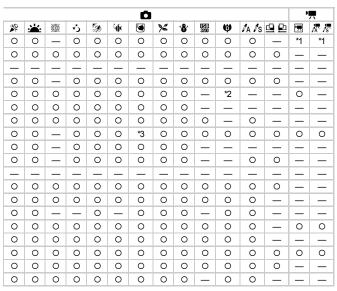

O Selectable - Not selectable

# የ† Set up Menu ■

Item	Options/Summary	Ref. Page
Mute	On/Off*	p. 49
Volume	Set all operation sounds (5 levels).	p. 49
Sound Options	Set the sounds played for each camera operation.	p. 139
LCD Brightness	Set within a range of ±2.	p. 50
Start-up Image	Add an image as start-up image.	p. 140
Format	Formats card, erasing all data.	p. 22
File Numbering	Continuous*/Auto Reset	p. 134
Create Folder	Create New Folder/Auto Create	p. 135
Auto Rotate	On*/Off	p. 135
Lens Retract	1 min.*/0 sec.	p. 136
Power Saving	Auto Power Down: On*/Off Display Off: 10, 20 or 30 sec/1*, 2 or 3 min.	p. 53
Time Zone	Home/World	p. 133
Date/Time	Date and time settings.	p. 20
Video System	NTSC/PAL	p. 110
Language	Select displayed language.	p. 21
Reset All	Returns camera to default settings.	p. 51

<sup>\*</sup> Default setting

# ▶ Playback Menu

Item	Options/Summary	Ref. Page
Slideshow	Plays back images and movies automatically.	p. 105
My Category	Categorizes images and movies.	p. 118
Erase	Erases images and movies.	p. 112
Protect	Protects images and movies.	p. 116
i-Contrast	Corrects dark portions of images.	p. 124
Red-Eye Correction	Corrects red eyes in images.	p. 125
Trimming	Trims portions of images.	p. 122
Resize	Resizes and saves images.	p. 121
My Colors	Adjusts colors in images.	p. 123
Rotate	Rotates images and movies.	p. 120
Resume	Last seen*/Last shot	p. 139
Transition	Fade*/Slide 1/Slide 2/Off	p. 109

<sup>\*</sup> Default setting

# 🕒 Print Menu

Item	Options/Summary	Ref. Page
Print	Displays printing screen.	p. 29
Select Images & Qty.	Selects individual images for printing.	p. 127
Select Range	Selects starting and ending images for printing.	p. 128
Select All Images	Selects all images for printing.	p. 128
Select by Date	Selects images for printing by date.	p. 129
Select by Category	Selects images for printing by category.	p. 129
Select by Folder	Selects images for printing by folder.	p. 129
Clear All Selections	Cancels all settings for printing.	p. 129
Print Settings	Sets the printing style.	p. 126

# **Handling Precautions**

## **Equipment**

- This camera is a high-precision electronic device. Do not drop it or subject it to strong impacts.
- Never place the camera close to magnets or motors that generate strong electromagnetic fields. Exposure to strong magnetic fields may cause malfunctions or corrupt image data.
- If water droplets have fallen or dirt is stuck on the camera or LCD monitor, wipe with a dry soft cloth or eyeglass wiper. Do not rub or apply force.
- Never use cleaners containing organic solvents to wipe the camera or LCD monitor.
- Use a commercially available blower brush to remove dust from the lens.
   For stubborn dirt contact the closest Canon Customer Support Help Desk as listed in your Warranty System Booklet.
- When you move the camera rapidly from cold to hot temperatures, condensation may form on the internal or external surfaces of the camera.
   To avoid condensation, put the camera in an airtight, resealable plastic bag and let it adjust to temperature changes slowly before removing it from the bag.
- If condensation has formed, stop using the camera immediately.
   Continued use may damage the camera. Remove the battery and memory card, and wait until the moisture has completely evaporated before resuming use.

## **Memory Cards**

- A memory card is a high-precision electronic device. Do not bend, apply force or subject it to strong impacts. Doing so may corrupt image data recorded on the memory card.
- Do not spill liquids on the memory card. Do not touch the memory card's terminals with your hands or metallic objects.
- Do not store memory cards near a TV, speakers or other devices that generate magnetic fields or static electricity. Doing so may corrupt image data recorded on the memory card.
- Do not store memory cards in hot, humid or dusty locations.

# **Specifications**

Camera Effective Pixels	1/2.3-inch type CCD (Total number of pixels:
	Approx. 12.4 million)
Lens	. 5.9 (W) – 17.9 (T) mm
	35mm film equivalent: 33 (W) – 100 (T) mm
Digital Zaam	F3.2 (W) – F5.8 (T) . Approx. 4.0x (Up to approx. 12x in combination
_	with the optical zoom)
LCD Monitor	Approx. 230,000 dots, Picture coverage 100%
AF Frame Mode	
Servo AF	
Focusing Range (from end of lens) .	
r ocusing range (nom end or lens).	45 cm (1.5 ft.) – infinity (T)
	Normal: 30 cm (1.0 ft.) – infinity (W)/
	45 cm (1.5 ft.) – infinity (T)
	Macro: 3 – 50 cm (1.2 in. – 1.6 ft.)
	Infinity: 3 m (9.8 ft.) – infinity
	Digital Macro: 3 – 10 cm (1.2 – 3.9 in.) Kids&Pets: 1 m (3.3 ft.) – infinity
Shutter	. Mechanical shutter and electronic shutter
Shutter Speed	
Onation Opeca	15 – 1/1500 sec. (Total shutter speed range)
Image Stabilization	
Metering Type	. Evaluative, Center-weighted average or Spot
Exposure Compensation	
ISO speed (Standard Output Sensiti	ivity, Recommended Exposure Index)
	. Auto, ISO 80 / 100 / 200 / 400 / 800 / 1600
White Balance	. Auto, Day Light, Cloudy, Tungsten, Fluorescent, Fluorescent H, Custom
Built-in Flash	. Auto, On, Slow Synchro, Off
	* Red-eye reduction/Red-eye correction settings available
Built-in Flash Range	30 cm – 3.5 m (12 in. – 11 ft.) (W)/ 45 cm – 2.0 m (1.5 – 6.6 ft.) (T)
Shooting Modes	. Shooting mode: Auto, Program AE, Portrait, Night
	Snapshot, Kids&Pets, Indoor, Sunset, Fireworks,
	Long Shutter, Beach, Underwater, Aquarium,
	Foliage, Snow, ISO 3200, Digital Macro, Color Accent, Color Swap, Stitch Assist
	Movie mode: Standard, Color Accent, Color Swap
Continuous Shooting	
J J	FaceSelf-Timer, Approx. 10 sec./Approx. 2-sec.
	delay, Custom Timer
i-Contrast	. Off/Auto

#### **Specifications**

Recording Media . . . . . . . . . . . . . SD memory card, SDHC memory card, MultiMediaCard, MMCplus memory card, HC MMCplus memory card File Format..... Design rule for Camera File system and DPOF compliant Data Type ......Still images: Exif 2.2 (JPEG) Movies: MOV (Image data: H.264, Audio data: Linear PCM) (Mono) Compression . . . . . . . . . . . . . . . . . Fine, Normal Number of Recording Pixels (Still images) . . . . . . . . . . . . . Large: 4000 × 3000 pixels Medium 1: 3264 × 2448 pixels Medium 2: 2592 × 1944 pixels Medium 3: 1600 × 1200 pixels Small: 640 × 480 pixels Widescreen: 4000 × 2248 pixels 640 × 480 pixels (30 frames/sec.) 320 × 240 pixels (30 frames/sec.) Number of Possible Shots . . . . . . LCD monitor on: Approx. 210 images (Based on CIPA standardized measurement) LCD monitor off: Approx. 500 images Sampling Rate: 44,100 kHz Playback Function . . . . . . . . . . . . . Single Image Playback, Video Playback, Magnified Focus, Index Playback, Magnified Playback, Jump, Slideshow Editing Function . . . . . . . . . . . . . . . . Erase, Protect, My Category, Resize, My Colors, i-Contrast, Trimming, Rotate, Red-Eve Correction Direct Print Type . . . . . . . . . . . . PictBridge capable unified type of digital, audio and video\*) \* mini-B compatible **HDMI Mini Connector** Communication Settings . . . . . . . . MTP, PTP Power......Battery Pack NB-4L (rechargeable lithium-ion battery) AC adapter kit ACK-DC10 Operating Temperatures . . . . . . . . . 0 – 40 °C (32 – 104 °F) 

Dimensions (excluding protrusions),  $.87.0 \times 54.5 \times 18.4 \text{ mm}$  (3.43  $\times$  2.15  $\times$  0.72 in.)

Weight (camera body only) . . . . . . . . Approx. 115 g (4.06 oz.)

#### **Battery Pack NB-4L**

Type......Rechargeable lithium-ion battery

#### Battery Charger CB-2LV/CB-2LVE

(240 V)

 Rated output
 .4.2 V DC, 0.65 A

 Charge time
 .Approx. 1 hour 30 min.

 Operating temperature
 .0 – 40 °C (32 – 104 °F)

Approx. 55 g (1.94 oz.) (CB-2LVE, excluding

power cord)

All data is based on tests by Canon.

The finished product, or exterior may differ from this report.

#### About MPEG-4 Licensing

This product is licensed under AT&T patents for the MPEG-4 standard and may be used for encoding MPEG-4 compliant video and/or decoding MPEG-4 compliant video that was encoded only (1) for a personal and non-commercial purpose or (2) by a video provider licensed under the AT&T patents to provide MPEG-4 compliant video. No license is granted or implied for any other use for MPEG-4 standard.

\* Notice displayed in English as required.

# Index

Numerics	Setting 19
3:2 Guide 137	Date/Time → Date and Time
	Default Settings 51
Α	DIGITAL CAMERA
AC Adapter Kit 40, 142	Solution Disk
Accessories	Digital Macro (Scene Mode) 68
AE Lock 83	Digital Tele-Converter61
AF Assist Beam 136	Digital Zoom60
AF Frame	Direct Print
AF → Focus	Disp. Overlay 137
AF Lock 82	Display Language21
Aquarium (Scene Mode)58	DPOF 126
AV Cable 2, 110	E
В	Editing
_	i-Contrast
Battery	My Colors
Battery Charger 2, 14, 40	Red-Eye Correction
Charge Indicator	Resizing (Making Images Smaller) 121
Charging14	Rotating Images
Date/Time Battery	Trimming
Power Saving53	Enlarged Display
Beach (Scene Mode) 57	Erasing
Black and White Images74	Erasing All Images
С	Error Messages
<del>-</del>	Exposure
Camera	AE Lock
Default Settings	Compensation
Holding	FE Lock
Camera Shake	1 L LOOK
Clock Functions	F
Color Accent	Face AiAF 80
(Scene Mode)	Face Self-Timer
Color Swap	FE Lock
(Scene Mode)	File Number
Components Guide	Fireworks (Scene Mode)
Compression Ratio	Flash
→ Image Quality (Compression Ratio)	Off 59
Continuous Shooting 71	On
D	Supplementary Flash40
Date and Time	Focus
Adding to Image	AF Frame
Changing	AF Frame Mode80
Date/Time Battery	AF Lock 82

AF-Point Zoom81	Formatting	22
Focus Check 108	Recordable Number of Images	70
Focus Lock 77	Menu	
Foliage (Scene Mode) 58	Basic Operations	48
FUNC. Menu	List 1	
Basic Operations 47	Metering Mode	83
List	MMCplus/HC MMCplus Memory Card	
	→ Memory Card	
G	Mode Switch	42
Grid Lines	Movie	
	Editing	98
Н	Estimated Shooting Time	
High ISO Speed 58, 72	Image Quality (Frame Rate)	
High-Power Flash40	Mode	
Histogram	Recording Pixels	
Household Power	Shooting Time	
112	Viewing (Playback)	
1	MultiMediaCard → Memory Card	
i-Contrast 85, 124	My Category1	15
Image	My Colors	
Display Time 53	Wy Golora74, 12	-
Editing → Editing	N	
Erasing Images	Night Snapshot (Scene Mode)	56
Playback → Viewing	Number of Shots	
Protect	Number of Shots	1
Image Quality (Compression Ratio) 69	0	
Indicator	ON/OFF button	,,
Indoor (Scene Mode)	ON/OTT BUILDIT	+2
,	P	
Infinity	Panoramic image	0
ISO Speed	PictBridge	
ISO 3200 (Scene Mode) 58	Playback Button	21
K	Playback → Viewing	_,
••	Portrait (Scene Mode)	
Kids&Pets (Scene Mode) 57	Postcard Size	/(
L	Power → Battery	_,
=	Power Saving	
Lamp42	Printer	
Language Settings	Printing	
LCD Monitor → Screen	Program AE	86
Long Shutter (Scene Mode) 88	R	
М	Recording Pixels (Image Size)	69
Memory Card 18	Red-Eye	
Available Shots	Correction 12	2

#### Index

Red-Eye Correction 86	U
Reduction 137	Underwater (Scene Mode) 58
Red-Eye Reduction Lamp 137	Using When Abroad
Resizing (Making Images Smaller) 121	
Rotating Images 120	V
•	Video → Movie
S	Viewing (Playback)
Scene Mode 56	Enlarged Display 109
Screen	Index Display 102
Display Language 21	Single Image Playback27
Information Displayed44	Slideshow 105
Menu Operations 47	Viewing Images on a TV 110, 111
Screen	Viewing Images on a TV 110, 111
Switching the Display 44, 45	
SD/SDHC Card → Memory Card	W
Self-Timer	Waterproof Case40
10 second Self-Timer 63	White Balance73
Changing Delay and Number of Shots 76	Widescreen (Recording Pixels) 69, 70
Face Self-Timer 64	World Clock 133
Two Second Self-Timer75	Wrist Strap → Strap
Sepia Tones74	_
Servo AF 82	Z
Shooting Date and Time → Date and Time	Zoom 24, 31, 60
Shooting Using a TV Monitor	
Shooting With Macro67	
Shutter Button	
Slideshow	
Snow (Scene Mode) 58	
Software	
DIGITAL CAMERA	
Solution Disk	
Sound 49	
Stitch Assist (Scene Mode) 92	
Strap	
Sunset (Scene Mode) 57	
Supplementary Flash40	
Supplementary Flash	
T	
Terminal 29, 110, 142	
Transferring Images to a Computer 34	
Transition 109	
Trimming 122	
Froubleshooting 143	